

**44959**  
**07-09 TOYOTA**  
**TUNDRA**



**44959**  
**07-09 TOYOTA**  
**TUNDRA**

## **SPORT SERIES GRILLE**

### **Tools Required:**

Phillips / Slotted Screwdrivers


### **Hardware / Parts List:**

1	Sport Series Grille	4	Short Snap Brackets
8	Long Snap Brackets		

**Read and understand instructions before attempting installation**

### **Step 1**

Read and understand all instructions before attempting the install of this grille. Be sure that the package of hardware matches the hardware list as listed above. Next, test fit the T-REX grille to the vehicles factory openings. You are now ready for the install:

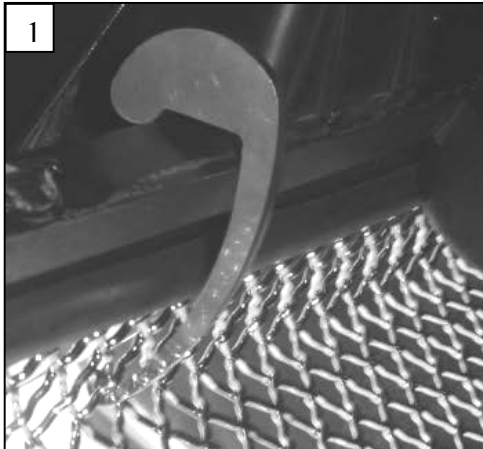

### **Step 2**

Open the hood. Secure the hood using a coat hanger or rope to keep the grille backing in reaching distance. Remove the factory logo from the grille shell. Center the insert into the factory grille. Hold the new grille firmly into the factory grille. Install the snap brackets to the mesh using the smaller ends of the brackets. The larger end will snap to the factory grille plastics (1). The longer brackets will fit the top edges of the grille and the short ones will fit the bottom. Make sure that the large end of the bracket wraps the outer edges of the factory grille plastic. The brackets should be spaced in a manor that holds the grille in place without warping the mesh.

***Thank you for purchasing your T-Rex billet grille. 9/17/08***