

**46458**  
**44458**  
**2013 DODGE**  
**RAM 1500**



**46458**  
**44458**  
**2013 DODGE**  
**RAM 1500**

## **2013 DODGE RAM 1500**

### **Mesh Grille**

**TOOLS REQUIRED:**  
Flat Screwdriver

**PARTS LIST:** Install time: 30 Mins.  
(4) Mesh Grilles

**PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.**

- Remove Clips to Remove the Plastic Cover. (Fig. 1)
  - Remove the Grille Shell.
  - Remove the Plastic Grille Support. (Fig. 2)
  - Unclip the Plastic Grille Covers with a Flat Screwdriver. (Fig. 3)
  - Unclip the Grilles from the Grille Shell and Remove. (Fig. 4)
  - Place the Mesh Grilles onto the Openings of the Grille Shell. (Fig. 5)
  - Place back the Plastic Grille Covers (use the Flat Screwdriver to put back the covers). (Fig. 6)
- Place back the Grille Shell.

### **INSTALLATION COMPLETE**



Fig 1

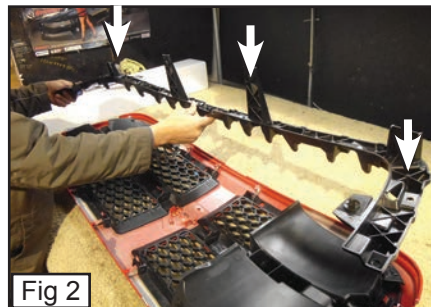


Fig 2



Fig 3



Fig 4

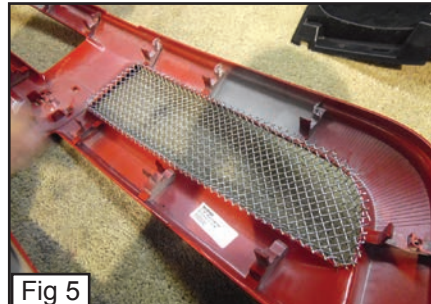


Fig 5

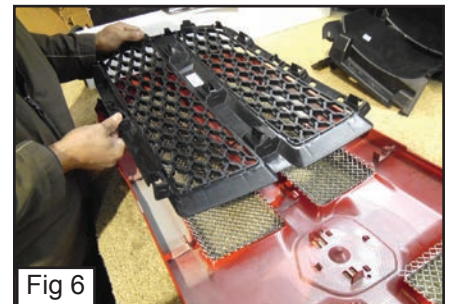


Fig 6