

55791
04-10 INFINITI
QX 56



55791
04-10 INFINITI
QX 56

1 PC MESH SERIES BUMPER - POLISHED



Recommended Tools:

3/8 Wrench or Nut Driver
Phillips

Parts List / Hardware:

1	Mesh Insert	2	#8 x 1" Screws (#6 Head)
2	Raised Extension Brackets	2	#8 U-Nuts
4	6-32 Nylon Lock Nuts	2	3/4" J Hooks

Read and understand instructions before attempting installation

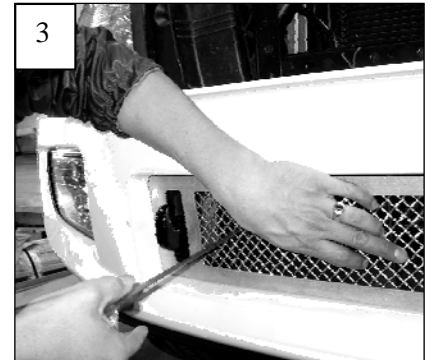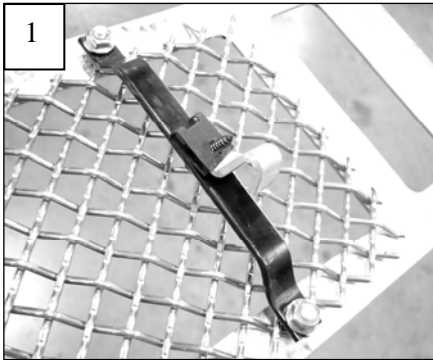

Step 1

Open the hood and test fit the grille in place. Remove the grille and attach the raised extension brackets as shown (1). **BE SURE NOT OVER-TIGHTEN THE STUDS** (Over-tightening can cause dimpling to the face of the billets).

Step 2

Slide the u-nuts onto the J hooks. Secure the J hooks to the extension brackets with the screws (Do not tighten). Re-center the grille in place; wrap the hooks around the vertical plastic bars in the opening (2). Carefully tighten the mounting screws (3). It may be necessary to slightly bend the extension brackets so they can allow tension to the J hooks. *Thank you for purchasing your T-Rex billet grille. 1/26/08*

