


Thank you for selecting a WeatherBeater® Trunk Liner from Winfield Consumer Products. Your new trunk liner is custom molded to fit your Honda CR-V. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the trunk of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409^{\circledR} or Glass Plus work well. Use of Armor All , Son-of-a-Gun or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR HONDA CR-V CARGO LINER

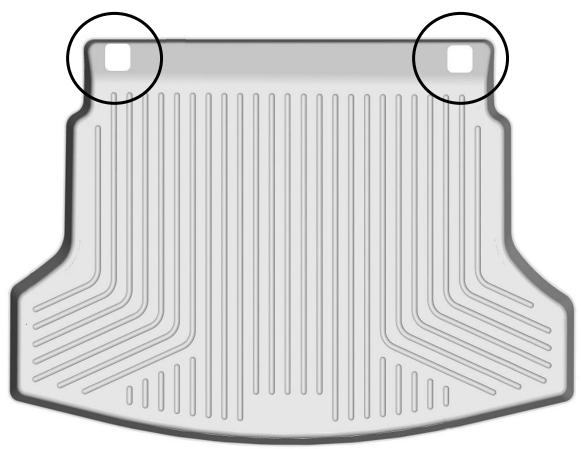

YOUR CR-V CARGO LINER IS DESIGNED TO ALLOW ACCESS TO THE FACTORY CARGO TIE DOWN HOOKS WITH THE LINER INSTALLED. TO ACCESS THE TWO HOOK LOCATIONS, SIMPLY USE A UTILITY KNIFE OR SIMILAR PRODUCT AND REMOVE THE MATERIAL FROM THE RECESSED AREAS ON YOUR LINER THAT CORRESPOND WITH THE HOOKS LOCATIONS (AREAS SHOWN ABOVE CIRCLED). USED THE EDGES FORMED BY THE RECESSED AREAS AS A TRIMMING GUIDE.