


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floor liners are custom molded to fit your particular vehicle. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR BUICK ENCLAVE/ GMC ACADIA/SATURN OUTLOOK FRONT FLOOR LINERS

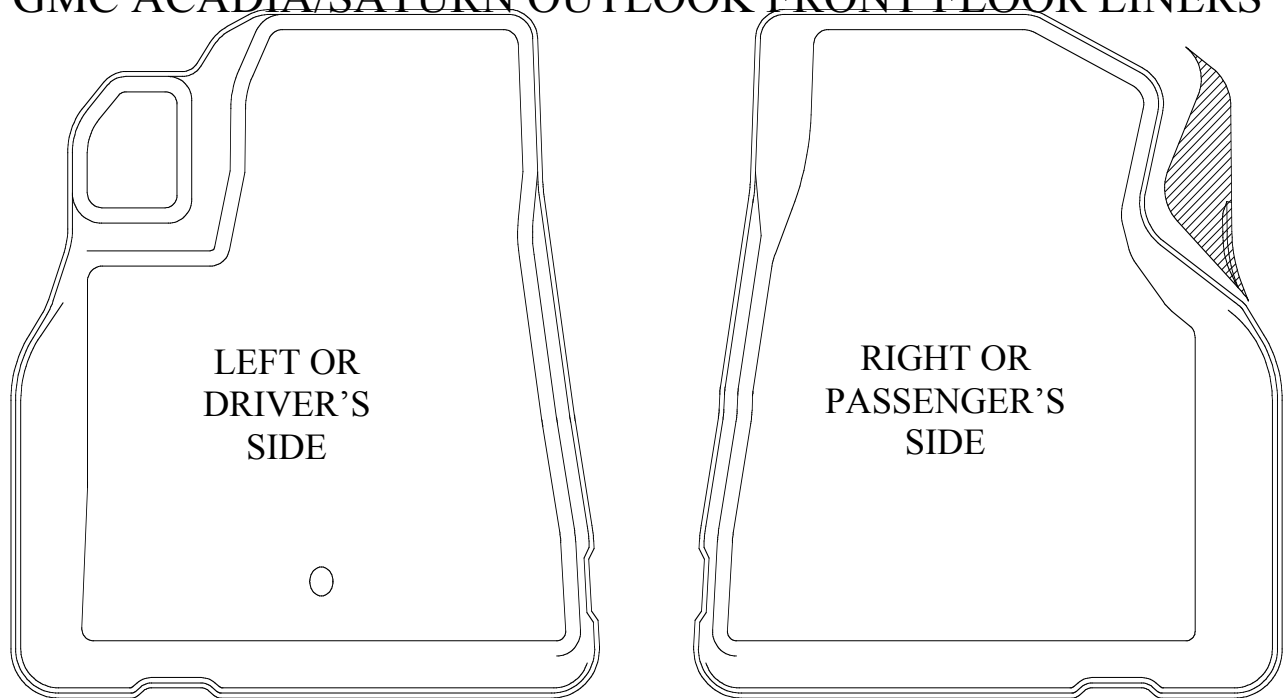

DUE TO DIFFERING DESIGNS OF THE PASSENGER SIDE KICK PANELS AVAILABLE IN THE ACADIA, ENCLAVE AND OUTLOOK, YOUR PASSENGER SIDE HUSKY LINER MAY NOT FIT "AS BOXED". HOWEVER, IF NEEDED, YOUR LINER CAN EASILY BE TRIMMED TO ACCOMMODATE THE LARGER KICK PANELS INSTALLED ON SOME MODELS.

TO DETERMINE IF TRIMMING IS NECESSARY, REMOVE BOTH LINERS FROM THE BOX AND FIND THE PASSENGER SIDE LINER. WITH IT LOCATED, TEST FIT IT IN YOUR VEHICLE. IF THE LINER LAYS FLAT AND CONTOURS THE FLOOR, NO TRIMMING IS NEEDED. HOWEVER, IF THE UPPER RIGHT HAND CORNER DOES NOT LAY FLAT BUT RIDES UP ON THE KICK PANEL, YOUR LINER WILL NEED TO BE TRIMMED (SEE SKETCH ABOVE AND IN PHOTOS ON THE BACK OF THIS PAGE).

TO TRIM, LOOK CLOSELY AT THE UPPER RIGHT HAND CORNER OF YOUR PASSENGER SIDE LINER. YOU WILL SEE THAT THERE IS A STEP MOLDED INTO THE LINER THAT DENOTES THE TRIM LINE. USING A UTILITY KNIFE OR HEAVY SHEARS, SIMPLY TRIM AWAY THE MATERIAL OUTSIDE OF THIS STEP. REFER TO THE PHOTOS ON THE BACK OF THIS PAGE FOR A MORE DETAILED GUIDE.

