




# X-ACT CONTOUR FLOOR LINERS

## CARE AND USE INSTRUCTIONS - PN:53951

Thank you for selecting an X-act Contour Floor Liner from Winfield Consumer Products. Your new third liner is custom molded to fit your Ford Explorer. The liner is made to take the place of your factory floor mats. ***For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners. However, do not remove the factory-installed carpeting.***

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Using Armor All®, Son-of-a-Gun® or like items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR FORD EXPLORER 3<sup>RD</sup> SEAT LINER

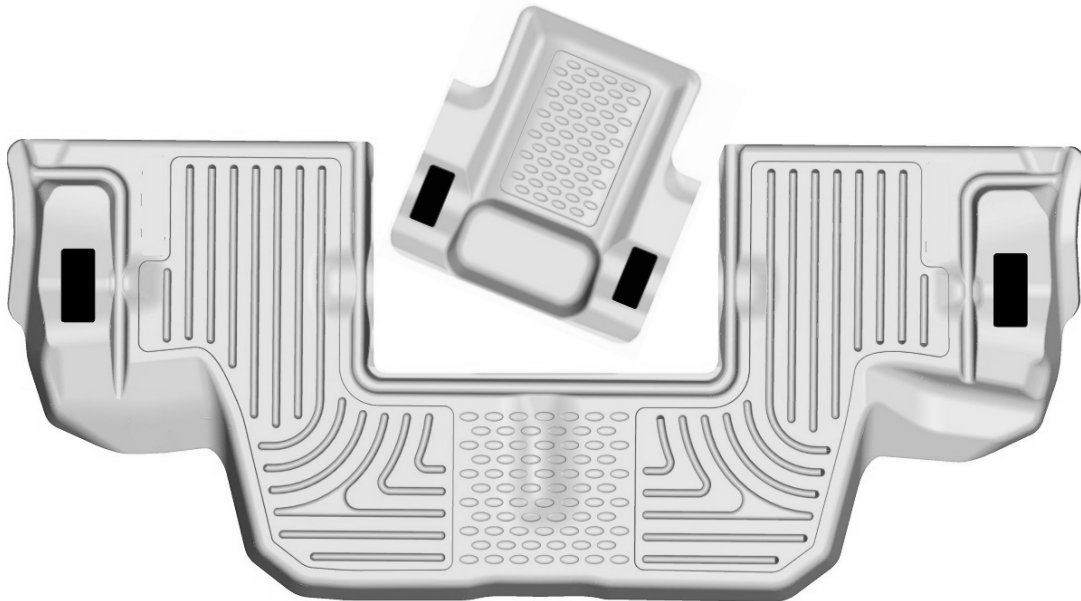


TO INSTALL YOUR 3<sup>RD</sup> SEAT FLOOR LINER, SIMPLY RELEASE AND FLIP/FOLD FORWARD YOUR 2<sup>ND</sup> ROW SEATS. NOTE THAT THE 2<sup>ND</sup> ROW SEATS WILL REATTACH THROUGH THE PRE-TRIMMED HOLES IN THE LINER. IF THE AREAS DARKENED ARE NOT TRIMMED OUT WHEN YOU RECEIVE YOUR LINER, ***DO NOT INSTALL YOUR LINER.*** INSTEAD, PLEASE CALL HUSKY LINERS AT 800-344-8759.

IF YOUR VEHICLE HAS A CONSOLE BETWEEN THE 2<sup>ND</sup> ROW SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE AND ON THE BACK OF THIS PAGE. TO TRIM, USE THE MOLDED IN STEP IN THE LINER AS A TRIM GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.

**PHOTO OF LINER #1976 TRIMMED AND INSTALLED IN AN EXPLORER WITH 2<sup>ND</sup> ROW CONSOLE AND ALSO WITH THE STANDARD 2<sup>ND</sup> ROW BENCH SEATING**

**EXPLORER 3<sup>RD</sup> SEAT LINER INSTALLED IN A VEHICLE WITH A 2<sup>ND</sup> ROW CONSOLE**

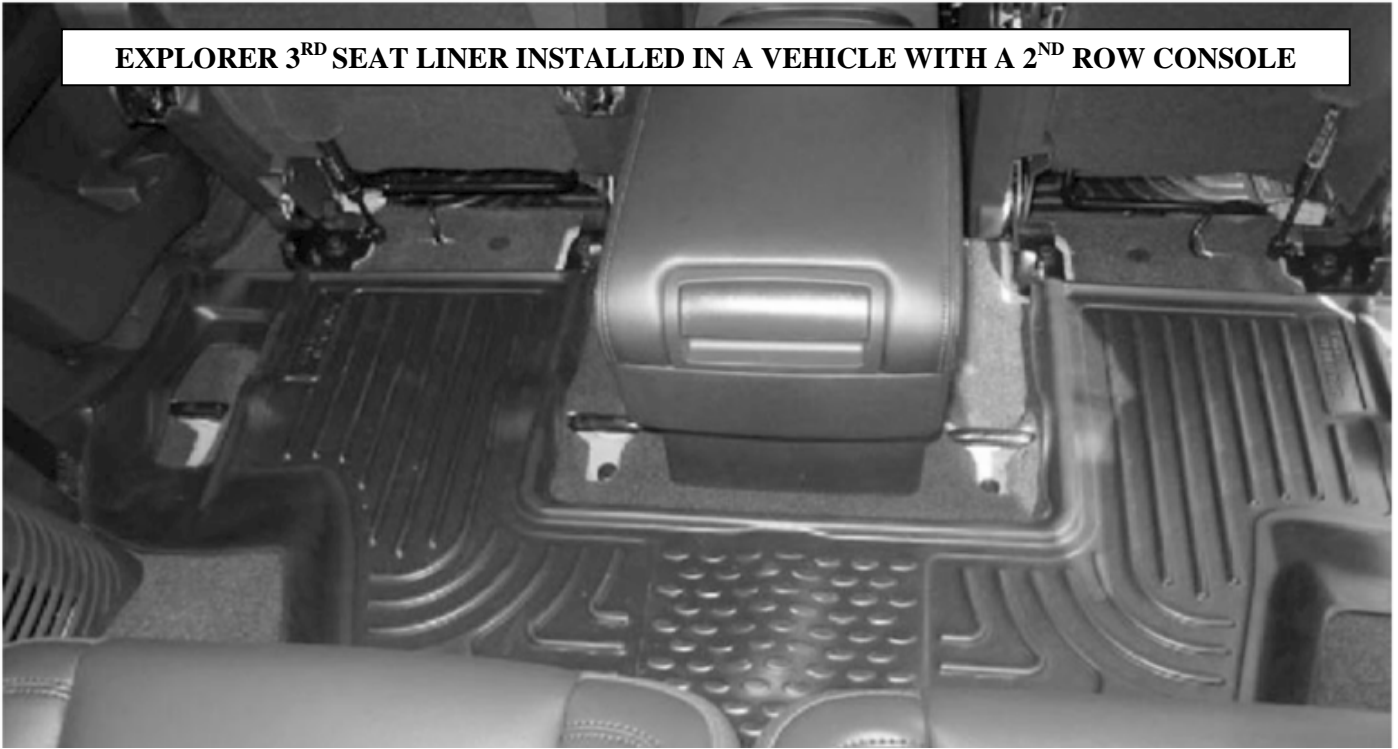

**EXPLORER 3<sup>RD</sup> SEAT LINER INSTALLED IN A VEHICLE WITHOUT A 2<sup>ND</sup> ROW CONSOLE**

