

THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


CARE AND USE INSTRUCTIONS

Your new floor liner is custom molded to fit Ford F250F350/F450 Crew Cab truck. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR FORD SUPER DUTY CREW CAB TRUCK SECOND SEAT FLOOR LINER

FRONT OF VEHICLE

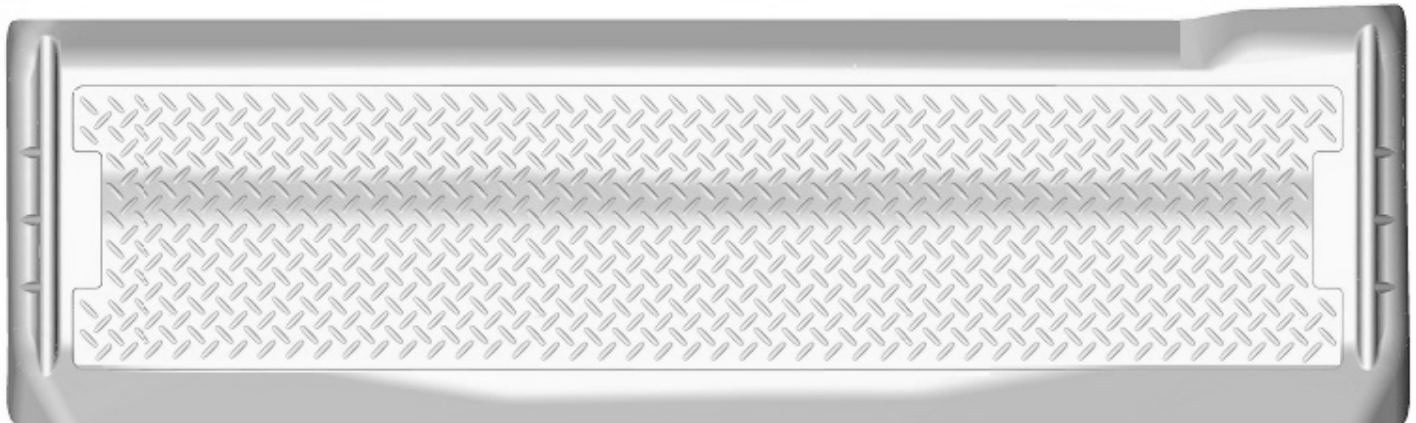

TO EASE INSTALLATION OF YOUR NEW FLOOR LINER, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITION. WITH THIS DONE, INSTALL YOUR LINER AS SHOWN AND READJUST YOUR FRONT ROW SEATS AS DESIRED.