

# THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS


## CARE AND USE INSTRUCTIONS

---

Your new floor liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mat before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

## INSTALLATION INSTRUCTIONS FOR YOUR CHEVROLET/GMC TRUCK/SUV CENTER HUMP LINER

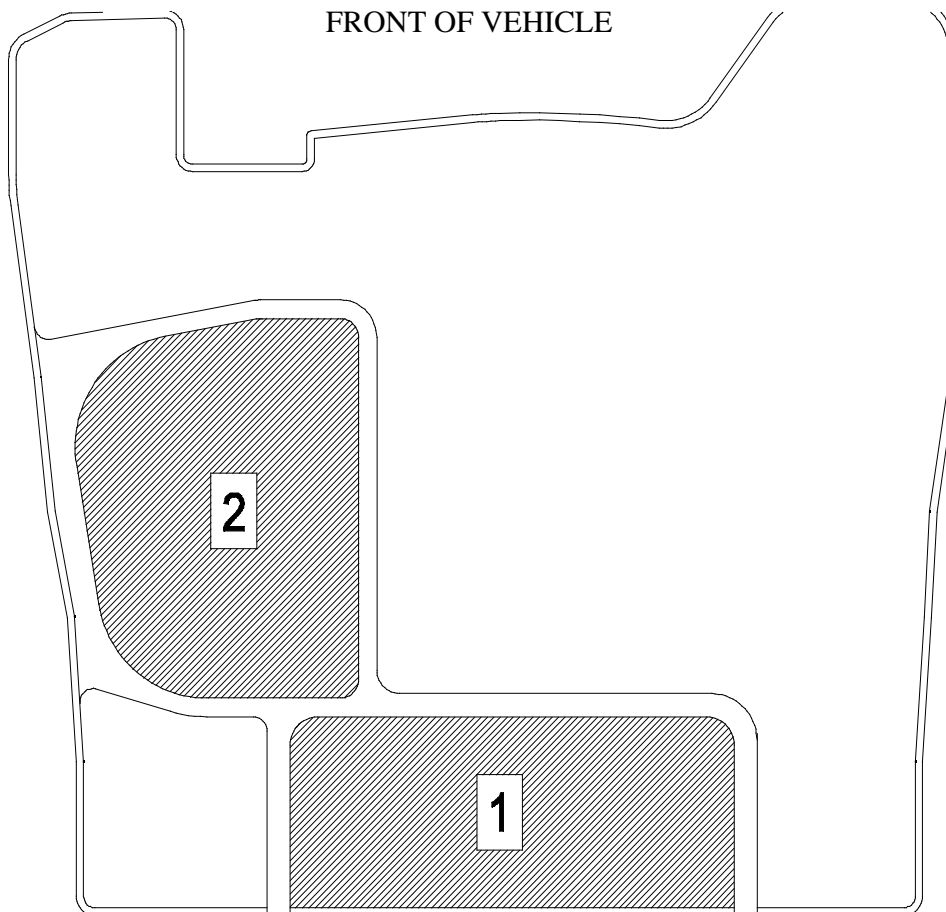

NOTE: IF YOUR VEHICLE IS EQUIPPED WITH A FACTORY CONSOLE, YOU WILL NEED TO REMOVE THE TREAD PLATE FROM AREA "1" SHOWN ABOVE BEFORE INSTALLATION. IF IT IS EQUIPPED WITH A MANUAL TRANSFER CASE SHIFTER (TRUCKS ONLY), REMOVE THE TREAD PLATE FROM AREA "2" SHOWN ABOVE. TEST FIT THE UNTRIMMED PART BEFORE TRIMMING. A UTILITY KNIFE OR HEAVY SCISSORS WORK WELL FOR TRIMMING