

HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new front floor liners are custom molded to fit your Jeep Grand Cherokee and Dodge Durango. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR DODGE DURANGO & JEEP GRAND CHEROKEE FRONT FLOOR LINERS



LEFT OR DRIVER'S SIDE



RIGHT OR PASSENGER'S SIDE

TO EASE INSTALLATION OF YOUR NEW FRONT LINERS, FIRST MOVE BOTH OF THE FRONT ROW SEATS ALL THE WAY BACK SO AS TO ALLOW THE MOST LEG ROOM. ONCE YOU HAVE INSTALLED YOUR LINERS, REPOSITION THE FRONT SEATS AS DESIRED. TAKE CARE THAT THE LINERS ARE SECURELY ATTACHED TO THE FACTORY MAT RETAINING POSTS.

NOTE: THE UPPER RIGHT HAND PORTION OF THE PASSENGER SIDE LINER TUCKS INTO THE RECESS LOCATED BEHIND THE KICK PANEL.


HUSKY **WeatherBEATER™** **Custom Vehicle Floor Protection**

CARE AND USE INSTRUCTIONS

Thank you for selecting a WeatherBeater® Floor Liner from Winfield Consumer Products. Your new rear floor liner is custom molded to fit your Jeep Grand Cherokee and Dodge Durango. The liner is made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mat before installing your new floor liners.** However, do not remove the factory-installed carpeting.

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liners slick.

INSTALLATION INSTRUCTIONS FOR YOUR DODGE DURANGO & GRAND CHEROKEE SECOND SEAT FLOOR LINER

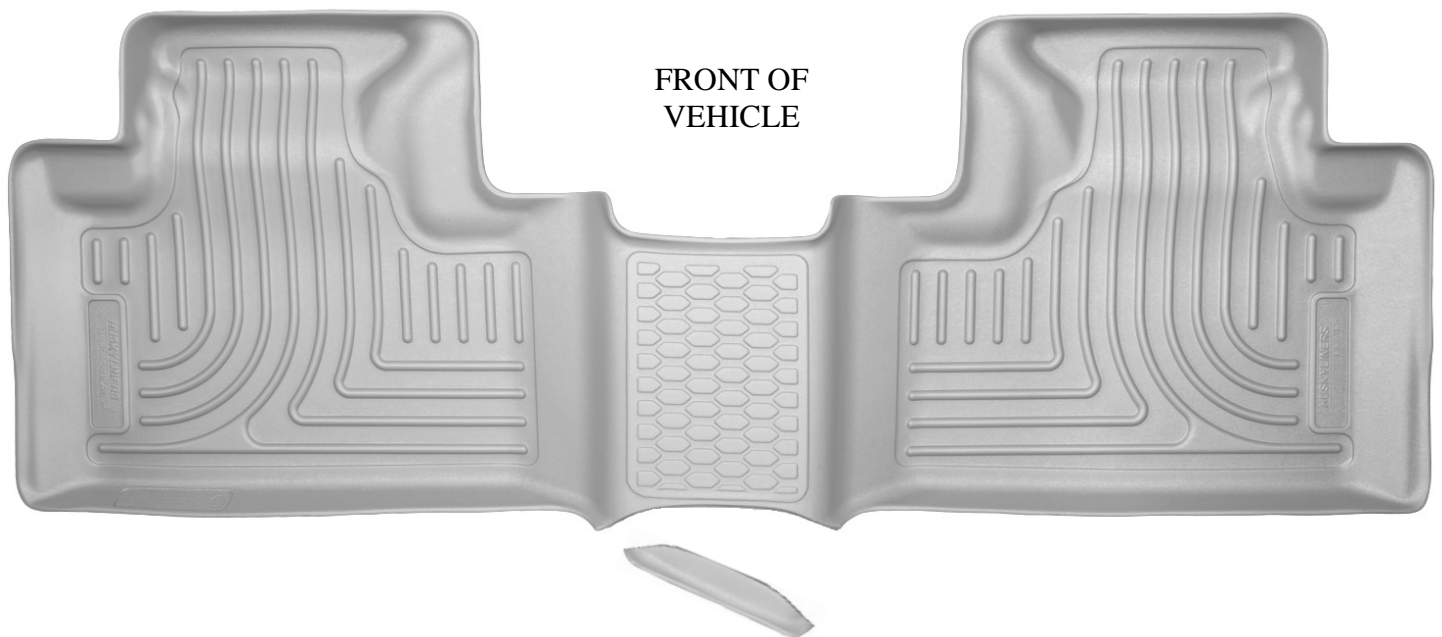

TO EASE INSTALLATION OF YOUR 2ND SEAT DURANGO / GRAND CHEROKEE FLOOR LINER, FIRST MOVE THE FRONT ROW SEATS TO THEIR MOST FORWARD POSITIONS. WITH THIS DONE, INSERT LINER IN VEHICLE THEN REPOSITION THE FRONT SEATS AS DESIRED.

IF YOUR VEHICLE IS EQUIPPED WITH THE OPTIONAL 2ND ROW BUCKET SEATING WITH A CONSOLE POSITIONED BETWEEN THE SEATS, YOU WILL NEED TO TRIM YOUR LINER AS SHOWN ABOVE. TRIMMING IS EASILY DONE USING THE MOLDED IN TRIM GROOVE AS A GUIDE. A UTILITY KNIFE OR HEAVY SHEARS WORK WELL FOR TRIMMING.