campright

Truck Tent Set Up Guide

Setting Up The Truck Tent

1-With the tailgate down, place the tent in your truck bed with screen mesh side facing up. Slip the tailgate pocket and under-strap over the end of the tailgate (Fig 1).

2-Attach the black strap clips to the bottom outside lip of the truck and snug up the straps slightly (Fig 2).





3-Run all (4) tent poles through their matching color coded sleeves (Fig 3).

4-Raise the (2) gray center poles by inserting the pole ends into their matching color coded pockets (Fig 4). Then raise the green and red poles. Make sure the pole sleeves slide over the poles with no hang-ups - don't force the poles through.





CAUTION: Each CampRight truck tent is designed to fit all makes and models of trucks within its category. The tents will fit slightly tighter on the largest size truck and slightly looser on the smallest size truck within their category. For those tents that feel tight during initial installation, please use caution when tightening straps and placing poles into pole pockets. **Do not use excessive force when performing these steps.**

5-Attach the inside green and red straps to your truck bed corner tie down points/cleats (Fig 5). Notice (2) straps attach to each cleat.




If your truck does not have tie down points, clip the (2) front red straps together (Fig 6) and run the (2) rear green straps through the tailgate gap to attach to something below (Fig 7). With this option, the middle (2) red and (2) green straps will hang free.





6-Adjust the inner and outer straps until the seam where the inner flap meets the tent runs along the top outside edge of your truck bed (Fig 8).

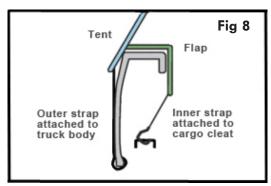

Once you have the straps adjusted for your truck, the next set-up will go faster.

Using The Rain Fly

Position the rain fly over the tent. Place the cab access sleeve from the tent inside the cab access sleeve of the rain fly (Fig 9 & 10). Attach the buckles and adjust their straps as necessary (Fig 11). Use of the rain fly is optional.







CAUTION: Do not drive with the tent set up. Do not run the truck engine when anyone is inside the tent. **Please** read and observe the caution tag on the inside of the tent.

Setting Up the Avalanche Truck Tent

Lower the 60/40 split-folding rear bench seat and the Midgate®. Remove the rear window and the three piece tonneau cargo cover (Fig 12). Set up is exactly the same as the other truck tents with the following exceptions:



In Step 2, place the stitched front edge of the tent (has (2) tie down strings sewn inside) in the gap between the plastic rear window frame and the metal roof (Fig 13). All (3) black strap clips from the front of the tent will attach in a row to the bottom of the Avalanche body (Fig 14). The pressure along these straps from one side of the Avalanche to the other side will hold the front edge in the gap.





If the Avalanche has a running board, attach the black strap clips down and around the running board to the truck's body (Fig 15) or attach them to the truck's wheel

In Step 7, the (2) black straps on the front of the rainfly should be secured inside the vehicle to the front cleats (Fig. 16). The vehicle's doors shut over the straps.





CAUTION: Metal magnets are located inside the front of the rain fly to hold it in place on the roof of the vehicle. Be careful when placing the rainfly on the roof of your Avalanche.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Visit: www.rightlinegear.com

LIMITED WARRANTY

Rightline Gear warrants that for one (1) year, from the date of purchase that all PackRight and CampRight products will be free of material defect and Rightline Gear will repair or replace any defective or damaged product free of charge if it is returned in original condition by the consumer to Rightline Gear or the place of purchase. Claims of defective material and/or workmanship must be made in a timely manner. Safe and maintenance-free use of this product depends upon the consumer's or user's proper installation of the product and good judgment in its use. Rightline Gear is not responsible for the consumer's or user's use or misuse of this product. Damage to Purchaser's vehicle or any other vehicle caused by Purchaser's improper use of this product may cause serious injury or death. The Purchaser acknowledges that Rightline Gear has no control over the attachment of its products to vehicles or the attachment of items to the Rightline Gear products. Accordingly, Rightline Gear cannot assume responsibility for any damage to any property arising out of the improper attachment or use of its products.

RIGHTLINE GEAR SPECIFICALLY DISCLAIMS ANY AND ALL OTHER WARRANTIES WHETHER EXPRESS OR IM-PLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. RIGHTLINE GEAR FUR-THER DISCLAIMS ANY WARRANTY OR OTHER PROMISE THAT GIVES RISE TO ANY SORT OF CONSEQUENTIAL, EXTRAORDINARY, PUNITIVE, EXEMPLARY, SUBSEQUENT, OR NONECONOMIC DAMAGES OR ATTORNEY FEES. THE CONSUMER OR USER'S SOLE REMEDY AGAINST RIGHTLINE GEAR FOR ANY DEFECT IN THIS PRODUCT IS LIMITED TO FULL RETURN OF THE PURCHASE PRICE.

RIGHTLINE GEAR SPECIFICALLY ENCOURAGES COM-PLIANCE WITH ALL MOTOR VEHICLE LAWS, AND EXPRESSLY DISCLAIMS ANY AND ALL LIABILITY FOR FAILURE TO COMPLY WITH SAME.