



PUTCO®

MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

INSTRUCTION GUIDE

FORD F-SERIES

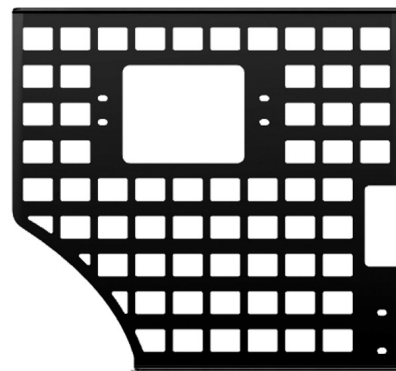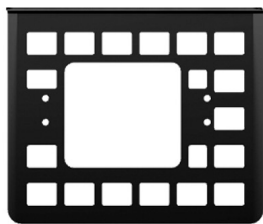

SIDE PANELS

Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

10MM WRENCH



T30 TORX DRIVE




CONTENT LIST

DESCRIPTION	QTY
Molle Front Side Plate	1
Molle Rear Side Plate	1
M6 Bolts	10
Brackets	3
Rubber Feet (8FT Bed Only)	2
Jam Nuts (8FT Bed Only)	2



INSTALLATION INSTRUCTIONS

- 1** Unscrew and remove the 4 tie-down plates using a T30 Torx driver. Place the side mounting brackets behind the tie down plates, then fasten to the bed re-using factory hardware. (NOTE: for the 6.5ft Super Duty molle the front side plate bracket is larger than the one for the rear).
- 2** Unscrew and remove the 2 rear tie-down hooks using a T30 Torx driver. Place the rear brackets behind the rear tie-down hooks, then fasten to the bed re-using factory hardware.
- 3** For F-150 8-ft beds, prepare the front side plate by loosely threading a jam nut onto each of the rubber feet, then loosely screw the feet into the riv-nuts on the bottom flange of the front side plate.

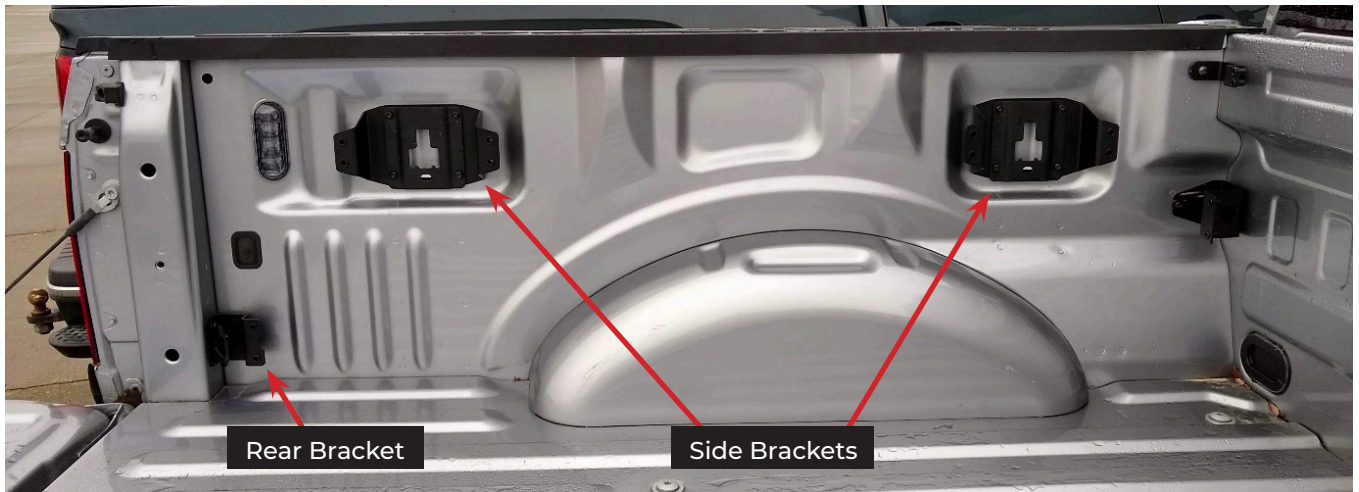

- 4** Fasten the side plates to their brackets using the supplied M6 bolts and a T30 Torx driver.
- 5** Once all the plates are installed in the vehicle, ensure all fasteners are tightened until snug, but do not overtighten.
- 6** For F-150 8-ft beds, screw down the rubber feet on the front side plate until they are snug against the floor of the bed, then secure in place by fastening the jam nut against the riv-nut using a 10mm wrench.

