

2014+ Toyota Tundra Hood Light Brackets

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Driver Side Bracket	1
Passenger Side Bracket	1

Tools Needed:

- Socket set
- 12mm socket

Installation Instructions:

The brackets are designed to utilize the factory mounting locations for the hood hinge. These locations are shown in **Figure 1**.



Figure 1: Bracket Locations

Installation Instructions Cont.

1. Begin by using a 12mm socket to loosen the top bolt holding the hood to the hinge. **It is important to only do one side of the hood at a time to prevent damage to the hood.** It may also be helpful to mark the bracket and hood with a marker before you begin loosening to use as a reference for aligning the hood.
2. Remove the top bolt and then install the bracket and top bolt back into place loosely as shown in **Figure 2.**
3. Remove the bottom bolt and slide the bracket into place and reinstall the bottom bolt.
4. Tighten the bolts while making sure the hood is aligned as it was before the bracket was loosened.
5. These light mounts require trimming of the hood gasket on the passenger side of the vehicle. Refer to **Figure 3** for directions on trimming location.
6. Repeat steps 1-4 on the other side of the vehicle.
7. Mount light in top hole of bracket (this kit is designed for Putco 10004 or 10007 LED Block Lamps)

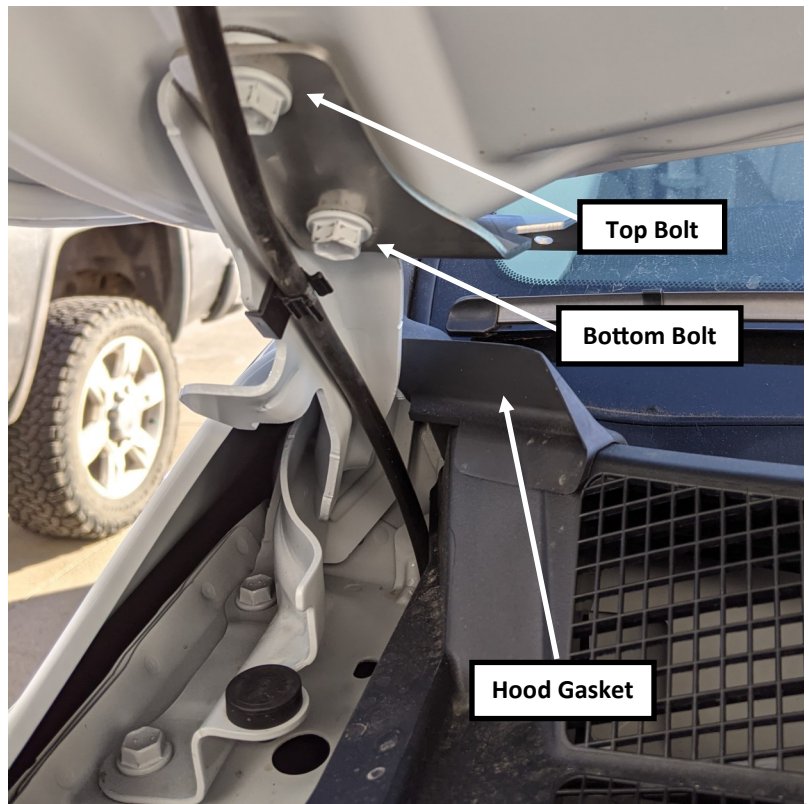


Figure 2: Bracket Installation.



Figure 3: Gasket Trimming.