

DRW Mud Skins Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Prior to installation, please read all instructions, and check to ensure all parts are included.

KIT CONTENTS:	
Description	Qty.
Drivers Side Mud Skin	1
Passengers Side Mud Skin	1
Hardware Kit	1

Tools Needed:

- Torx Bit (If required)
- Trim Removal Tool
- 5/32" Allen Wrench
- 7/16" Wrench

Installation Instructions:

1. Remove items from packaging. Check to see if all parts from above table of contents are included.
2. Using the required wrench or bit driver for your specific vehicle, remove fender trim from the back of the wheel as shown in Figure 1.
****NOTE**** If your vehicle has mud flaps already installed, these must be removed before going on to step 3.
3. Once the trim has been removed, install the Mud Skin by lining the mounting bracket portion of the Mud Skin with the existing hardware holes, then position Mud Skin at desired height and offset of the vehicle's tire and fender. Install hardware removed from the vehicle in step 2 or the supplied hardware from hardware kit if applicable. Please see figures 2 and 3.



Figure 1



Figure 2

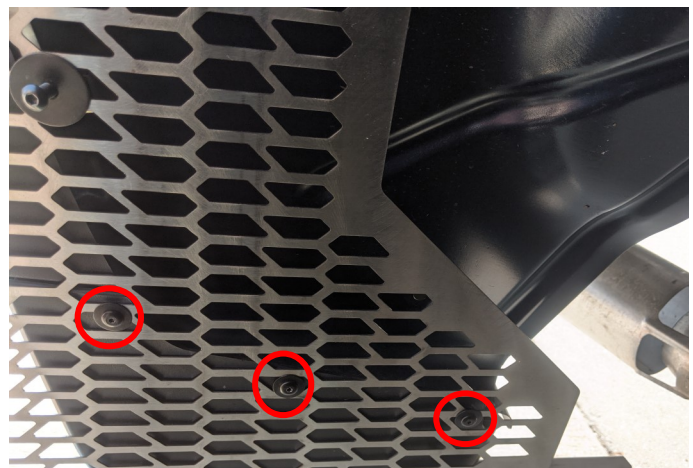


Figure 3

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

Installation Instructions:

4. Once the hardware holding the bottom of the Mud Skin has been installed and the Mud Skin is in the desired position, attach the upper clamp to the outside edge of the fender as shown in figures below. This is done for added rigidity to the upper section of the Mud Skin (this is not required, but is recommended for added support to the upper section of the mounting bracket). Fasten the upper clamp into place using the provided bolts, washers, and a 5/52" Allen key to complete the installation of the Mud Skin product.

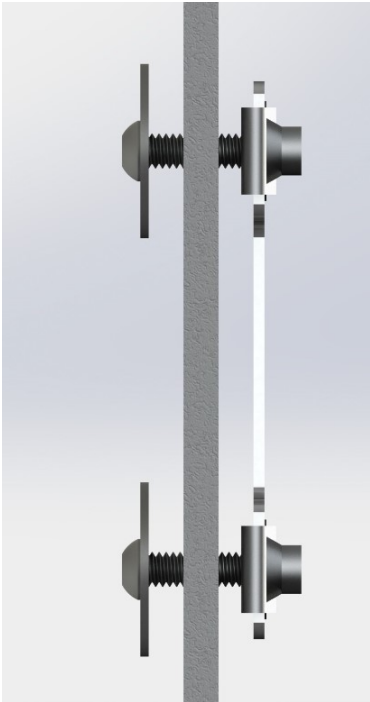


Figure 4 Upper Clamp Sideview

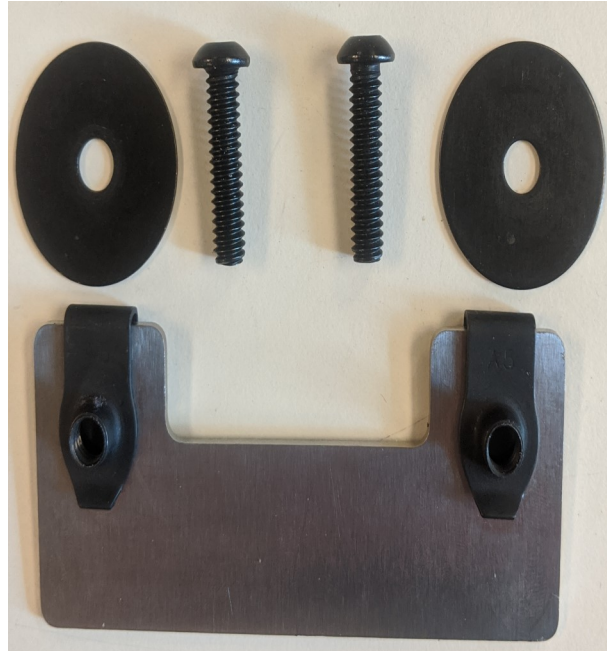


Figure 5 Upper Clamp & Hardware

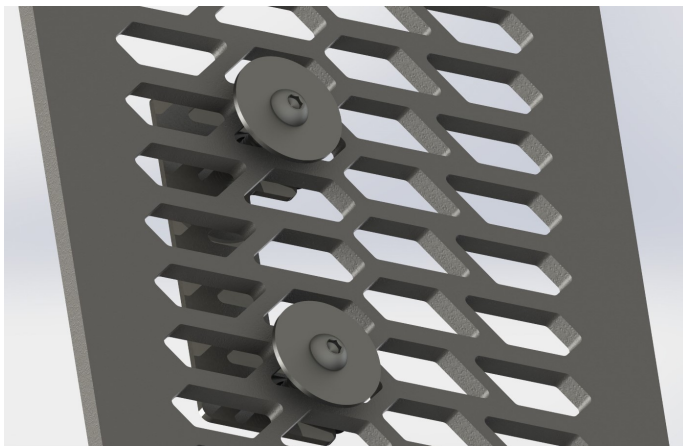


Figure 6 Upper Clamp attached to Mud Skin

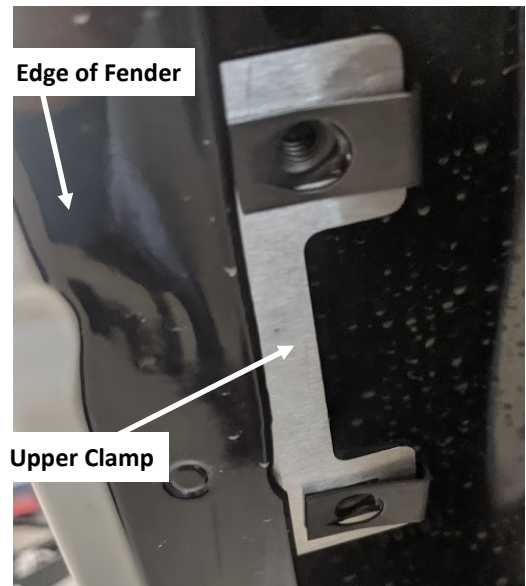


Figure 7 Clamp Placement on Fender

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

Installation Instructions: Inner Support Bracket For Ford F-350 DRW ONLY

5. If not done already, remove the fender bolt located under the vehicle connecting the fender to fender trim. Install inner support bracket using 5/32 Allen key and 1/4"-20 nylock nut with a 7/16 wrench. Attach one side of the bracket to the mounting bracket of the Mud Skin. The other side of the bracket will be installed in the previously removed bolt location under the fender. Please see figures below.



Figure 8 Fender Trim & Liner Connecting Bolt



Figure 9 Support Bracket Mounting Location When Connected to Mounting Bracket

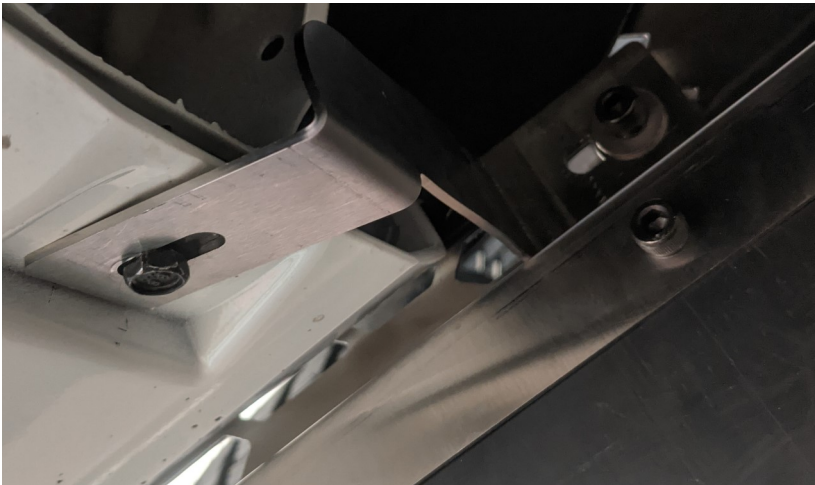


Figure 10 Fender Liner Connecting Bolt Hole for Inner Support Bracket

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.