



HORNET

AMBER LED STEALTH ROOFTOP STROBE LIGHT BAR

INSTRUCTION GUIDE

2014-2018 CHEVY



Congratulations on your purchase of a high quality PUTCO® product. Should you need any application or technical assistance, feel free to call us at:

1-800-247-3974

Monday-Friday 8:00am - 5:00pm (Central Standard Time)
Contact your PUTCO® dealer for other quality accessories.



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

ALLEN WRENCH
(size: 1/8" & 9/64")



WRENCH (size: 3/8")



T20 TORX DRIVER



CONTENT LIST

QTY

Bracket	1
10-32 Bolt	4
10-32 Nylock Nut	4
HD Unthreaded Bumper	2
8-32 Cap Bolt	2
8-32 Nut	2



- 1** Remove items from packaging. Check to see if all parts from above table of contents are included.

- 2** With a T20 Torx driver, remove and keep the four screws holding in the 3rd brake light.

- 3** Remove the 3rd brake light by pulling outwards from the bottom of the light and unplugging the 3rd brake light from its harness. **(Figure 1)**

- 4** Install the rubber bumpers onto the hornet light bracket using the included 8-32 bolts and nuts. Using the 9/64" Allen, set the nuts inside the bumper and squeeze to tighten onto the bracket as a socket will not fit inside the counter bore as seen in **Figure 2**.

- 5** Install the gasket onto the side of the bracket that will be facing into the truck. This can be seen in **Figure 3**. *(Holding the light up to the bracket will give a good indication of where the gasket should be applied.)*

NOTE: If you have purchased a 24" Hornet light, at this point proceed to the other set of instructions included. *(24" Hornet Adapter Installation: 950024I)*

- 6** At this point, install the hornet light on to the mounting bracket using the 10-32 nuts and bolts. This will require the 1/8" Allen and the 3/8" wrench. **(Figure 2)**



Figure 1: Installing Hornet Light onto bracket.

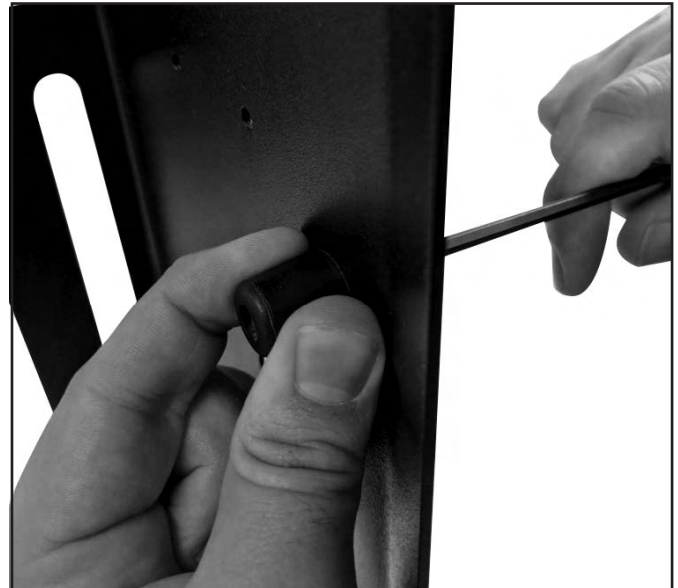


Figure 2 (Left): Nut clip centered in hole of bed

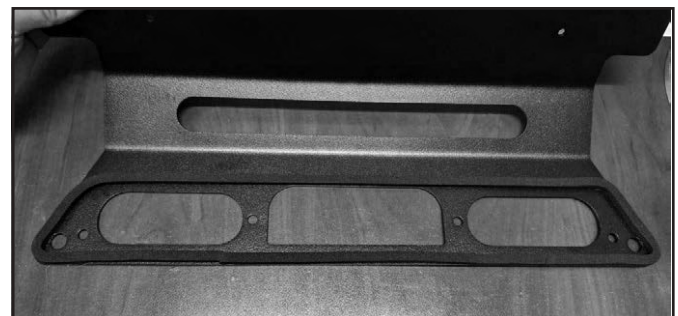


Figure 3: Gasket installation.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.



7 Cut a small slot in the gasket on the bottom of the bracket near the end of the center hole on the bracket to allow for the wire to feed through. **(Figure 4)**

8 Feed the wire through the hole behind the 3rd brake light and route it through the cab to a suitable switch mounting location. **(Figure 5)**

9 Position the 3rd brake light on the bracket and reinstall the brake light taking care to reconnect the harness and not pinch the Hornet light cable. Installing and slightly tightening the two inside screws first aids in ease of installation. **(Figure 5)**

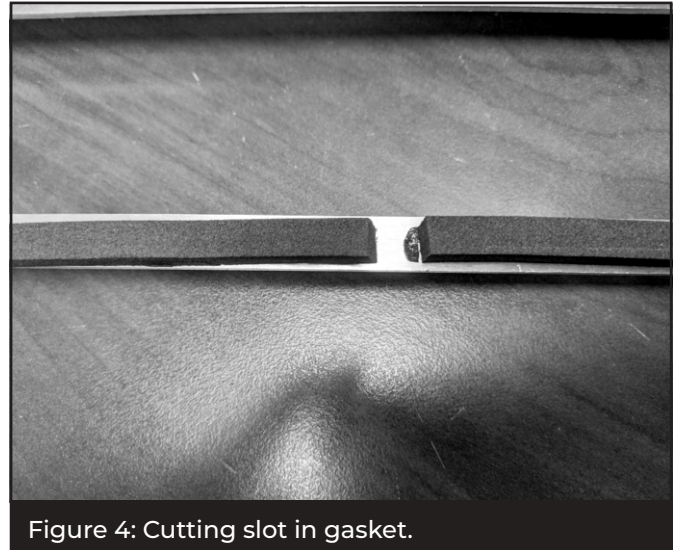


Figure 4: Cutting slot in gasket.

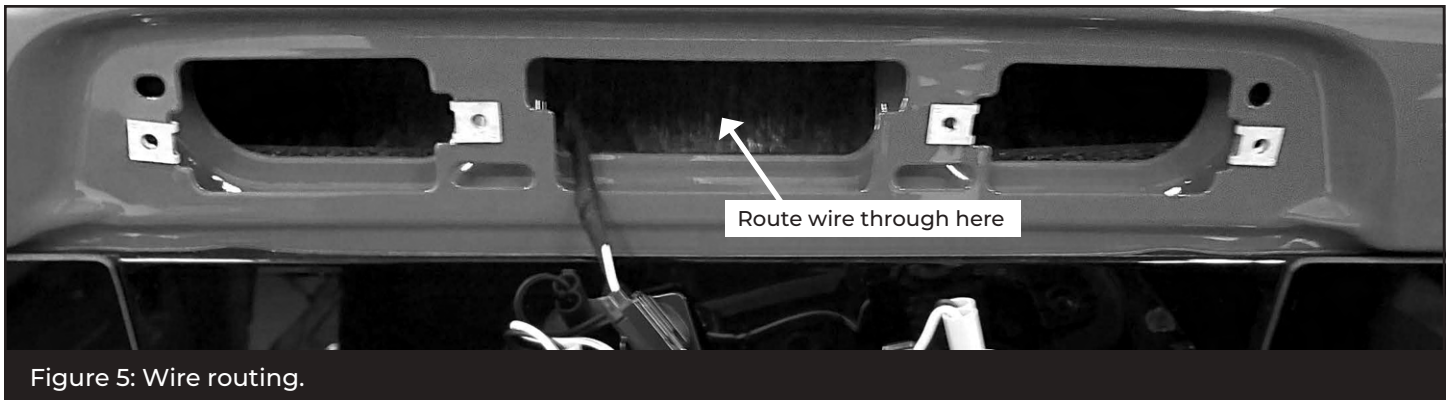


Figure 5: Wire routing.

10 Route the wire around the side of the 3rd brake light and through the slot cut on the bottom of the bracket in previous steps. **(Figure 6)**



Figure 6: Wire routing cont.

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

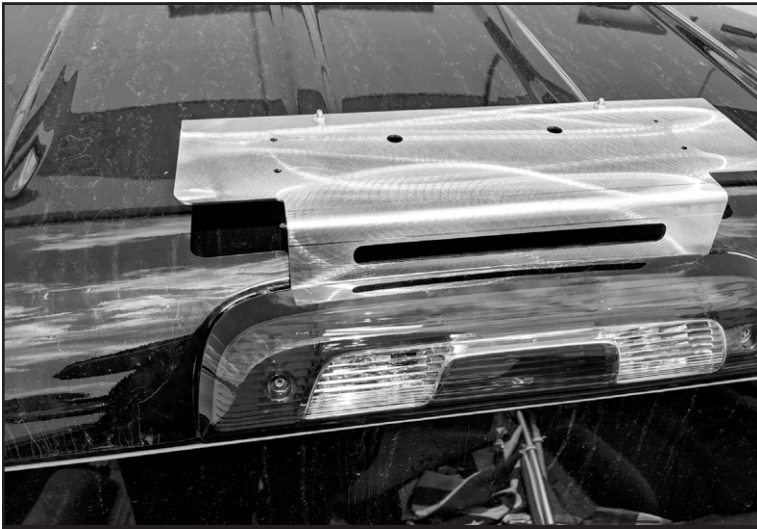


Figure 7: Example of installed bracket.

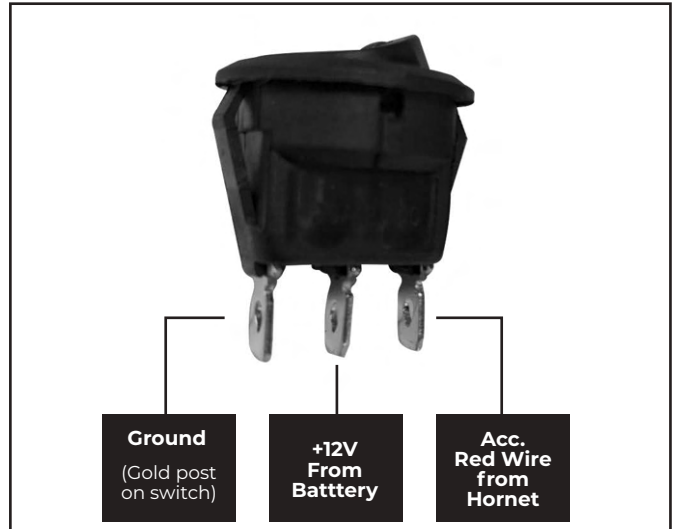


Figure 8: Switch wiring diagram.

11

To wire the switches properly, refer to the wiring diagram in Figure 8.

NOTE: When the switch is configured correctly it should function as follows: The primary switch, or the switch hooked up to the red wire, controls power to the Hornet light. This switch will turn the light on and off. To switch modes, the primary switch must be in the ON position. While the Hornet light is receiving power via the red wire, give 12V power to the yellow wire. If it does not change modes, check to make sure that the light is receiving power from the primary switch. The light will remember the mode even with the switch turned off.

Your new Hornet is now successfully installed on your vehicle!



Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.