

1966-67 Convertible Top Boot Clip

Installation Instructions - Part# #CL5201

For best results, Read the entire procedure before beginning.

Installation time should be 10 to 15 minutes.

CL5201 Kit Contents:

16 Retainers

Tools Required:

Standard Pliers
Razor Knife



Figure 1



Preparation:

Lay out the top boot upside down. Locate the plastic strip attached to the under rear of the boot. Notice that there are a series of square holes and cut slots punched in the strip. It may be necessary to punch out the centers of some or all of these square holes. Using a razor knife, carefully clean the extra debris off to make a clean square hole. Make sure the slot is cut through the strip. Take care to not cut the vinyl boot or cut the plastic strip too much (Figure 1).


Mounting the retainers:

Figure 2




Insert the two tangs on the clip through the slot in the plastic strip. Snap the Metal clips through the square hole making sure it seats tight against the plastic strip (Figure 2).

Figure 3

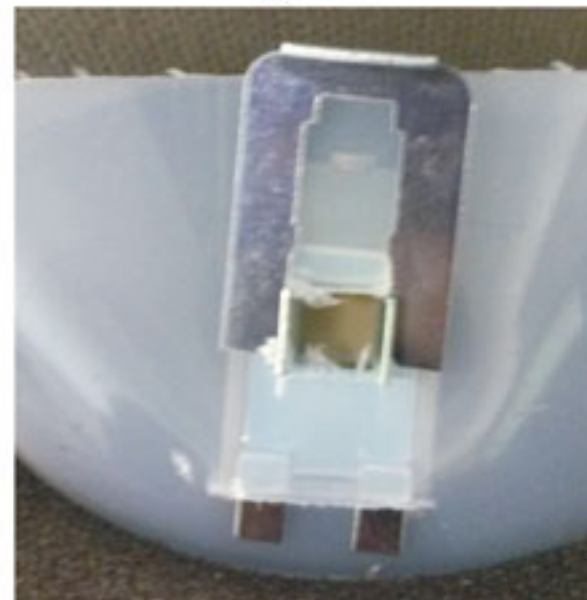

At the underside of the plastic strip, slide the retainer onto the metal clips of the boot clip (Figure 3).

Figure 4

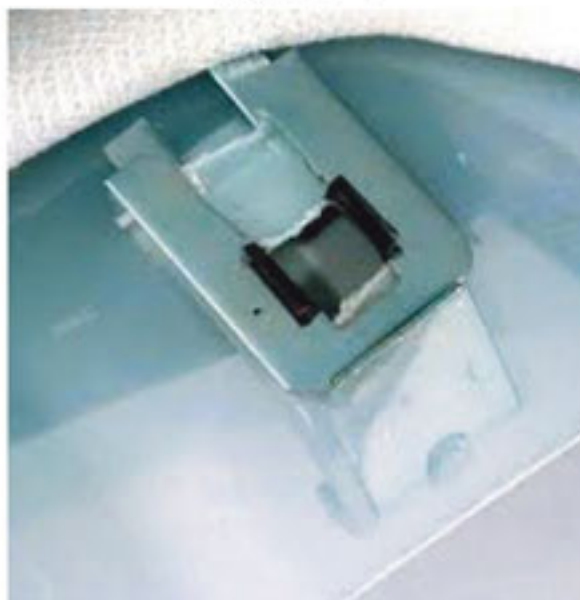

Using a pair of pliers, Snap the retainer all the way into place tight against the metal clips (Figure 4).

Figure 5



(Figure 5) shows a properly installed clip.

Repeat procedure for the additional 15 clips.