



www.skyjacker.com

2011 Chevy / GM 2500 HD  
4WD  
OEM HD Steering Stabilizer  
Part # 7011

REQUIRED TOOL LIST:

- Safety Glasses
- Metric / Standard Wrenches & Sockets
- Measuring Tape

Before beginning the installation, thoroughly & completely read these instructions & the enclosed driver's WARNING NOTICE. Affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to the disassembly of the vehicle. If any parts are found to be missing, contact SKYJACKER® Customer Service at 318-388-0816 to obtain the needed items. If you have any questions or reservations about the installation of this product, call SKYJACKER® Technical Assistance at 318-388-0816.

**Kit Box Breakdown:**

**Part #: 7011**

ITEM#	DESCRIPTION	QTY
7000WS	WHITE STEERING DAMPER	1
HSS	HYDRO SHOCK DECAL	1
HB-7011	HDWR BAG: 7011	1
I-7011	INST SHEET: 7011	1


**Hardware Bag Breakdown:**

**HB-7011                      HARDWARE BAG**

ITEM#	DESCRIPTION	QTY
12X212FTB	1/2 X 2 1/2 FINE THRD BOLT	1
12FTN	1/2-20 FINE N/I LOCK NUT	1
12SAEW	1/2 SAE WASHER	2
403712	ES22 SLEEVE/1.25" LONG	1
HG58125	HOURGLASS 5/8" X 1.25"	1
HOURGLASS 5/8	HOURGLASS 5/8 SHOCK BUSHING	1
P837	STAB TAPERED STUD/141264	1

## **Installation:**

1. Park the vehicle on a level concrete or asphalt surface with the tires / wheels pointing straight forward.
2. Set the emergency brake & block the rear tires / wheels.
3. If equipped, remove the OEM steering stabilizer from the frame & from the center steering link.
4. Install the 1 1/4" long bushing into the "body" end of the new Skyjacker steering stabilizer & install the 1 1/4" long sleeve into the bushing. (See Photo # 1)
5. Install the 5/8" hourglass bushing, which is 1 1/2" long, into the shaft end of the new Skyjacker steering stabilizer. (See Photo # 2)
6. Install the tapered stud into the center steering link & tighten using the supplied nut & washer. Slide the shaft end of the new Skyjacker steering stabilizer over the stud & tighten using the supplied nut & washer. (See Photo # 3)
7. Attach the body end of the new Skyjacker steering stabilizer to the OEM mount on the frame using the supplied 1/2" x 2 1/2" bolt, washers, & nut. (See Photo # 4)
8. After installing the new Skyjacker steering stabilizer, cycle the steering left to tight & check all components for adequate clearance. Re-tighten all hardware after the first 100 miles & periodically there after.

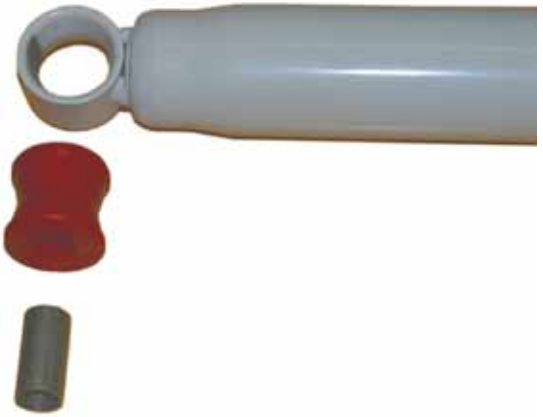

**Photo # 1**



**Photo # 2**



**Photo # 3**



**Photo # 4**

**Seat Belts Save Lives, Please Wear Your Seat Belt.**