



RC 270 Deg Awning High Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

Kit Contents:
Awning Brackets x2

Tools Needed:
4mm Allen Wrench
10mm Wrench or Socket

Hardware Included:
8mm-1.25 x 25 BHCS Bolts x8
8MM-1.25 Nylock Nut x8
8mm Flat Washer x8
8mm Lock Washer x8




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Remove the top (2) Allen head bolts in the rack using a 4mm Allen wrench. **See Photo 1.**
2. Install the bracket onto the top of the rack aligning the slots to the mounting holes. Secure using (2) supplied lock washers and (2) supplied 8mm x 25mm Allen head bolts **See Photo 2.**

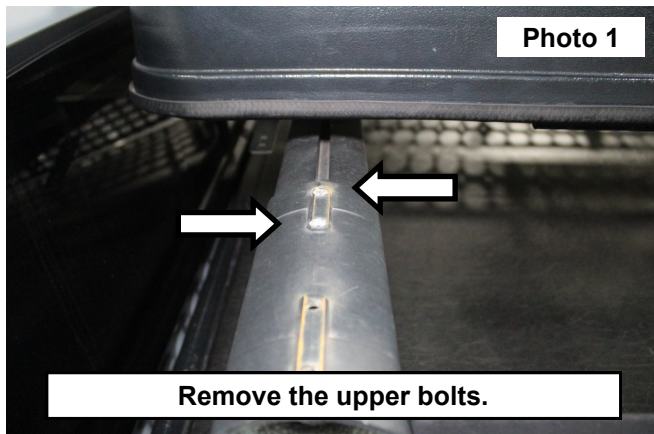

3. Place in each of the (2) outer mounting holes (1) supplied flat washer and (1) supplied 8mm x 25mm Allen head bolt using a 4mm Allen wrench. **See Photo 3.**
4. Secure each bolt using (1) supplied Flat washer and (1) supplied nylock nut and snug each of the bolts using a 4mm Allen Wrench and an 11mm socket. **See Photo 4.**

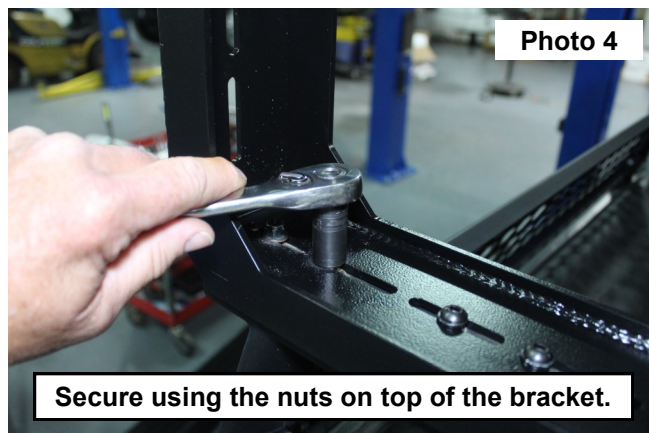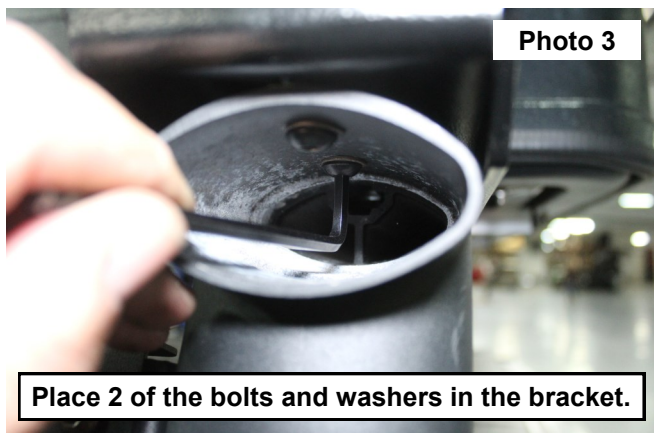

5. Install the remaining bracket on the opposite side using the corresponding supplied hardware. **See Photo 5.**
6. Place the awning onto the brackets per the instructions included with the awning and the following instructions for adjustment. **See Photo 6.**

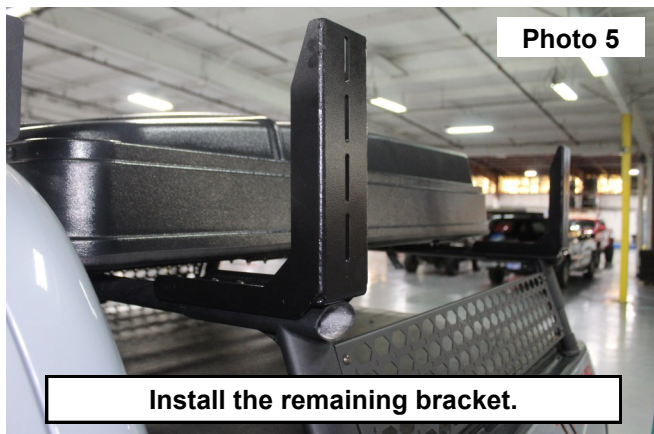

7. Secure the awning to the brackets using the supplied flat washers and nuts. **See Photo 7.**
8. Adjust the awning to the rack and the height of the awning and that it is level to the rack. Tighten the bolts using a 4mm Allen wrench and a 10mm wrench and reinstall bed rack end cap. **See Photo 8.**



9. Tighten the awning nuts. **See Photo 9.**
10. Fully extend the awning and ensure that setting up and pack up functions correctly. **See Photo 10.**



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



