


[Return to Instruction Sheet index](#)

TCI® 720011 Powerglide Case Savers

The TCI® case saver clips are designed to fit into all six (6) reverse steel pockets that are located in the bottom of the case. The top pressure plate and snap ring will locate the clips and prevent them from riding up and out of the pockets.

Modifications for the stock or Dedenbear case:

1. Remove all ridges or burrs caused by the previous steel plates.
2. Install the clips into the pockets. If the bottom portion of a clip will not fully seat down into the pocket, it may be necessary to use a rotary file and remove some of the case material. The clip shoulder must fit against the case to allow proper up and down movement of the reverse steels.
3. Install the six (6) case saver clips, and then stack the reverse clutch pack in the normal manner.
4. Install the top pressure plate and snap ring. Check clutch pack clearance.

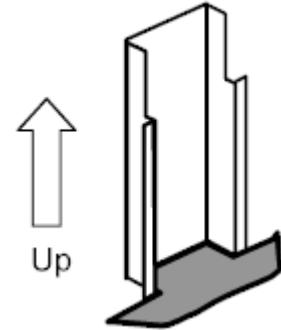

Modifications for the JW case:

The JW case requires the bottom of the top pressure plate to be chamfered. This will make installation easier.

1. Remove all ridges or burrs caused by the previous steel plates.
2. Place all six (6) clips into the case. Modify case, if necessary, to allow the shoulders of the clips to seat against the case.
3. Install at least one steel plate to make sure that the plate has free movement up and down.
4. Remove steel plate and put a small dab of JB Weld or similar adhesive on the back of each clip and install the clips into the case. Stack up the reverse clutch in the normal manner.
5. Install the top pressure plate (it may be necessary to tap the pressure plate into position).
6. Check clutch pack clearance and insure that the clutch pack moves up and down freely.

10/03