

IMF94



2016+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com














Manufacturer warranty covers material defects on new, never installed parts. Once installed, all mud flap replacement part costs are the responsibility of the vehicle owner. Caution against blind spots during parking. Avoid curbs and excessive compression to the flaps. Check stock and aftermarket wheel/suspension clearances.

INSTALLATION QUESTION? FOR REPLACEMENT PART QUOTES, SEND FLAP RECEIPT OR PHOTO → www.rallyarmor.com/support

Recommended Tools Low-profile offset, ratcheting, flat & Phillips screwdrivers, 10mm & 11mm wrenches, pick.

ONLY install on even surface using hand tools, not powered tools. AVOID OVERTIGHTENING HARDWARE.

ABOUT OUR STANDARD IN MUD FLAPS Polyurethane is a high grade plastic that may feature minor surface layer marks. These are visual variations that don't affect flap construction or performance. Most matte away as the material ages over time.

MF94 KIT CONTENTS <i>CONFIRM ALL PARTS AND QUANTITIES BEFORE INSTALLATION</i>				
MUD FLAP KIT PN:	MF94	<i>SEE PAGE 4 DRAWINGS</i>	PART DESCRIPTION	QUANTITY
	MF94-LF-TOP		LEFT FRONT TOP	1
	MF84-LF-BOT		LEFT FRONT BOTTOM	1
	MF94-RF-TOP		RIGHT FRONT TOP	1
	MF84-RF-BOT		RIGHT FRONT BOTTOM	1
	MF94-LR-TOP		LEFT REAR TOP	1
	MF84-LR-BOT		LEFT REAR BOTTOM	1
	MF94-RR-TOP		RIGHT REAR TOP	1
	MF84-RR-BOT		RIGHT REAR BOTTOM	1
BRACKET KIT PN:	BMF94	<i>SEE PG 4</i>		
	BMF92-FRT		BRACKET	2
	LBRKT2		BRACKET 2	2
HARDWARE KIT PN:	HMF94	<i>SEE PG 4</i>		
	.75SP		SPACER	2
	1SP		LONG SPACER	2
	1SS		SCREW	12
	1.5SS		MEDIUM SCREW	2
	2SS		LONG SCREW	2
	BLKNUT		NUT	16
	HXBLT		BOLT	16
	SMWASH		WASHER	48
	UNUT2		CLIP	2

IMF94



2016+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com

FRONT MUD FLAP Access interior wheel well by turning steering wheel towards the installation side.

Bracket/Hardware 1 FLAP → 1 x .75SP; 3 x 1SS; 1 x 1.5SS; 4 x BLKNUT; 1 x BMF92-FRT; 4 x HXBLT; 1 x LBRKT2; 12 x SMWASH

1 x UNUT2

IMAGE A If equipped, remove factory splash guards. Uninstall fasteners 1 - 3. Temporarily remove and retain underbody factory bolt 4.

IMAGE B Place larger hole end of LBRKT2 over mount 4, then reinstall underbody fastener 4. Smaller hole end will nest against flap.

IMAGE C Install UNUT2 over smaller hole end of LBRKT2.





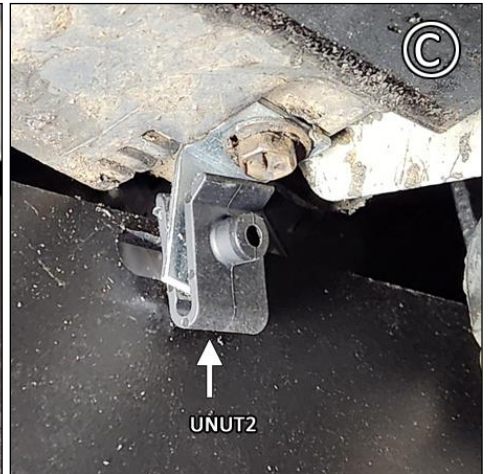


IMAGE D Position logoed flap MF84-LF/RF-BOT over top MF94-LF/RF-TOP holes. Assemble using SMWASH and HXBLT on logo-side and SMWASH and BLKNUT on tire-side of flap.

IMAGE E Align assembled flap to vehicle mounts. Install SMWASH and 1SS to mounts 1, 2 and 5. Place .75SP between flap and fender liner mount 3. Position BMF92-FRT over flap mount 3 then fasten with SMWASH and 1.5SS.

IMAGE F Ensure mud flap is parallel to even ground. Adjust preferred width before hand-tightening washers flush to flap.

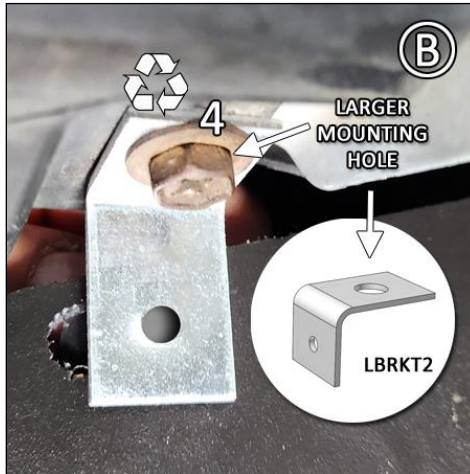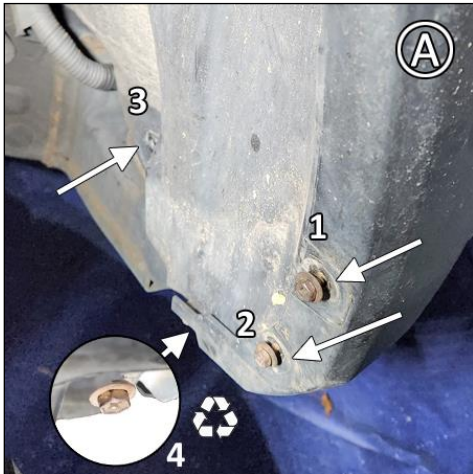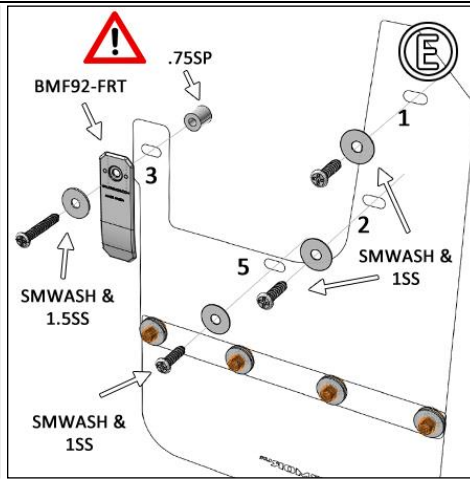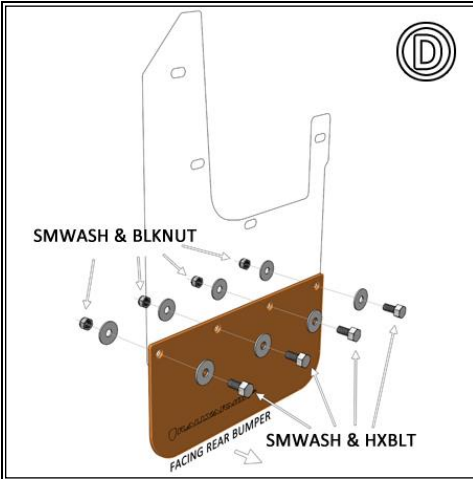

IMF94



2016+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com

REAR MUD FLAP Bracket/Hardware 1 FLAP → 1 x 1SP; 3 x 1SS; 1 x 2SS; 4 x BLKNUT; 4 x HXBLT; 12 x SMWASH

IMAGE G Remove fasteners 1 - 4.

IMAGE H Place logoed flap MF84-LR/RR-BOT over top MF94-LR/RR-TOP mounts. Assemble using SMWASH and HXBLT on logo-side and SMWASH and BLKNUT on tire-side of flap.

IMAGE I Install SMWASH and 1SS into mounts 1 - 3.

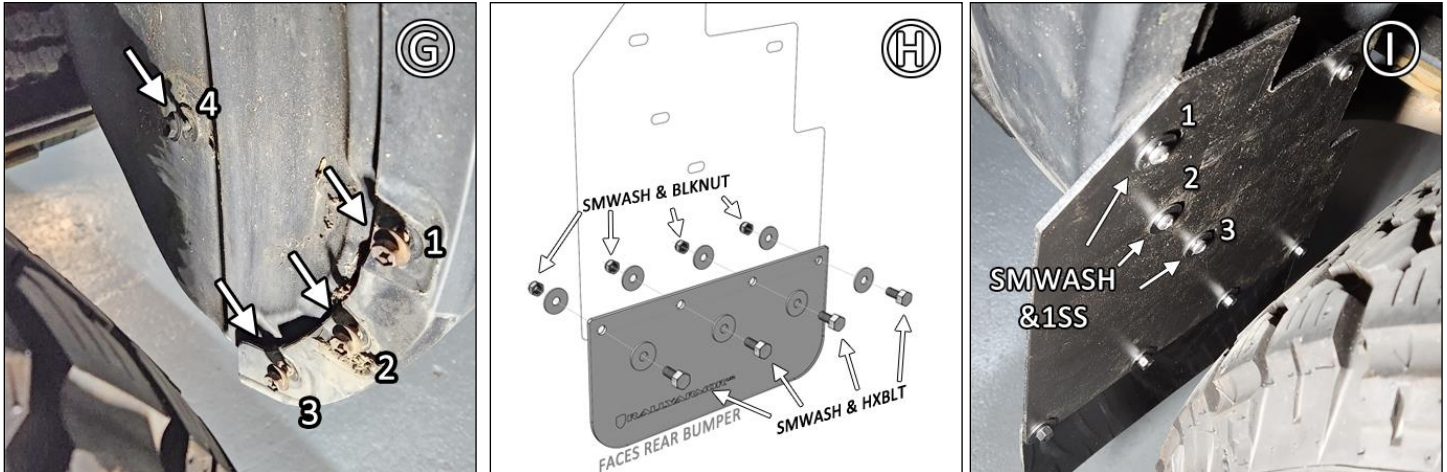


IMAGE J Place 1SP between flap and liner, then install SMWASH and 2SS into mount 4.

IMAGE K/L Ensure mud flap is parallel to even ground. Adjust preferred width before hand-tightening washers flush to flap. For vehicles equipped with aftermarket tires, ensure flap clears tire.



IMF94



2016+ Toyota Tacoma Installation Instructions Also online www.rallyarmor.com

