


The Right Stuff Detailing

465 Commerce Dr. • Sunbury, OH • 43074
Ph: (800) 405-2000 • Fax: (740) 965-8721
Net: www.rightstuffdetailing.com
info@rightstuffdetailing

67-69 Camaro
68-74 Nova

Brake Line Installation

1. Begin by loosely installing the master cylinder lines into the master cylinder.
2. Hold the brass proportioning valve in position and start the threads of the master cylinder lines.
3. Bolt the bracket into place on the **inside** of proportioning valve.
4. Tighten the fittings down **after** you install the bracket.

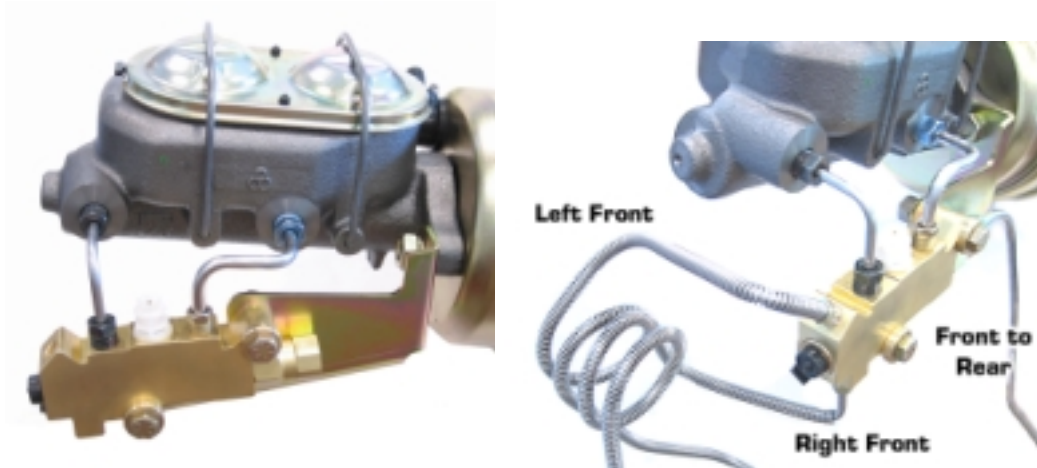

Note: Some master cylinder lines have loops in them. They are interchangeable with the straight lines pictured above.

Note: The lines shown in these illustrations route the same way for cars with and without brake boosters.

5. Install the remaining lines as pictured above.

