


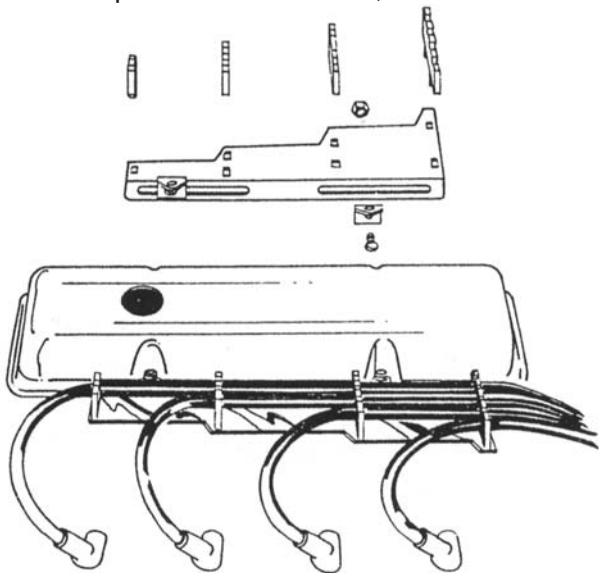

PART # 9517 CHROME PLATED LINEAR WIRE LOOMS

1. Assemble tabs & snap in wire separators as shown.
2. Install using valve cover hold-down.
3. Snap spark plug wires into separators & route.
Note: Separators will fit 7mm, 8mm & 9mm wires.



12438 Putnam Street • Whittier, CA 90602
tel (562) 921-0404 • fax (562) 921-7515
website: www.tdperformance.com
email: techsupport@tdperformance.com