



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS

This Nitrous Outlet Vehicle Specific Bottle Bracket Mount is designed specifically for the 2020 and up Chevrolet C8 Corvette. If you need any assistance during installation or if you have questions about this bottle mount, call our Tech Help Line at (254) 848-4300.

Tools Needed for Installation:

- 10mm Deep Socket
- T-30 Torx Bit
- Ratchet
- 1/2" Wrench
- 3/16" Allen Wrench
- 1" Hole Saw
- Drill
- Marker
- Trim Tool
- 3/8" Drill Bit

Additional Materials Needed for Installation:

- Grease Remover

**These are the tools required for installation of this kit on a stock vehicle. If your vehicle has aftermarket parts, other tools may be required.*



Step 1: Disconnect the Battery

- Open the front storage compartment.



- Remove the trim panels on each side of the vehicle by pulling them from the clips securing them to the body.



- Remove the main panel covering the battery by pulling it from the clips securing it to the body.



- Using a 10mm socket, loosen the nut and remove from the negative terminal.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS




Step 2: Vehicle Disassembly

- Remove the front trim panel from the front storage area.



- Using a T-30 Torx bit, remove the 4 screws from the front storage bin.

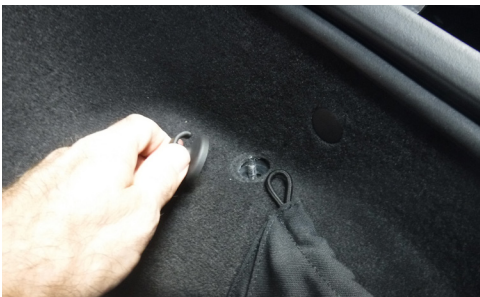

- Unscrew the 2 rear tabs holding the storage net.



- Unplug the front storage light/power port connector.



- Remove the front storage bin from the vehicle.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.


WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS

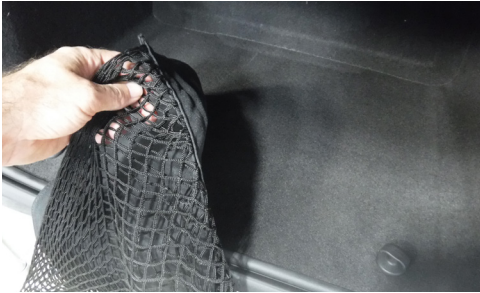

- Remove the cargo net from the front storage compartment.



- Unscrew the front 2 tabs for the storage net.



- Using a trim tool, remove the 4 trim buttons in the storage compartment.



- Remove the weatherstripping from the storage compartment.



- Remove the storage compartment liner.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS



Step 3: Bottle Installation

- Before installing the bottle mount backing plates, clean the back and inside back wall of the storage compartment with a grease remover.



- Follow the instructions on the epoxy provided with the plate to secure the backing plates in the proper location. Allow adequate drying time before installing bottle bracket.

Note: Be sure not to get any of the epoxy in the holes of the backing plates.



- On the back of the storage compartment, unclip the sensor wire and epoxy Top Backing Plate 1 centered on the wiring and liner clip bases.



- Using a 3/8" drill bit, match drill the 3 holes in the backing plate.



- Insert the provided 1" long, 5/16" hardware through the drilled holes.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS



- Epoxy Top Backing Plate 2 and place it on the inside of the storage compartment, centered on the protruding hardware.



- Using a 3/16" Allen wrench, install the 3 long mount spacers in the top backing plates.



- Using a 3/16" Allen wrench, install the bottle mount on the mount spacers.



- Using a sharpie, mark the 3 bottom bolt holes through the bottom of the bottle mount.



- Using a 3/8" drill bit, drill holes where you marked.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS



- Insert the provided 1-1/2" long, 5/16" hardware through the drilled holes from the inside, out.



- Epoxy one of the Bottom Backing Plates and place it on the outside of the storage compartment, centered on the protruding hardware.



- Remove the 5/16" hardware and insert them through the drilled holes from the outside, in.



- Epoxy the other Bottom Backing Plate and place it on the inside of the storage compartment, centered on the protruding hardware.



- Using a 1" hole saw, drill a hole on the angled part of the storage compartment, below the trim button insert and to the right of the Top Backing Plate 2.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS



- Remove all the hardware and spacers and place the liner back in the storage compartment.



- Reinstall the front 2 tabs for the storage net to ensure that the liner is properly placed.



- Match drill the liner from the outside. Use the 3/8" drill bit for the 6 mounting holes. Use the 1" hole saw for the feed line hole.



- Assemble your bottle bracket on mounting plate.



IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS



- Using a 3/16" Allen wrench and 1/2" wrench, install mount with bracket in the storage compartment.

At the top – Use 3 of the 1" long, 5/16" bolts with washers to reinstall the long spacers. After the spacers, install the mounting plate using the remaining 1" long, 5/16" bolts with washers.



- **At the bottom** – Insert the 3 - 1-1/2" long, 5/16" bolts with washers from the outside of the storage compartment. Place a short spacer over each of the bolts. The bolts will then pass through the bottom holes of the mounting plate. Secure the plate with the provided locknuts.



Step 4: Final Assembly

- Place the storage compartment back in the vehicle.



- Reinstall the net tabs, trim buttons, cargo net, and weatherstripping in the front storage compartment.



- Reconnect the battery.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.


WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



2020-2021 C8 Corvette Bottle Bracket Mount

PART NUMBER: 00-33012

INSTALLATION INSTRUCTIONS

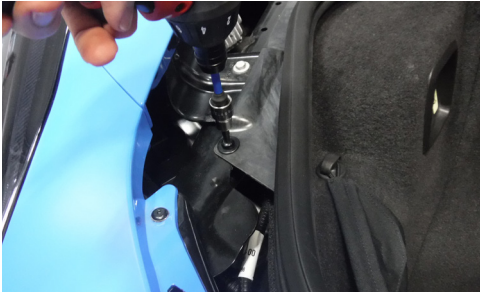

- Reinstall the 4 mounting screws.



- Reconnect the front storage light/power port connector.



- Reinstall the 4 trim panels around the front storage compartment.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s). Nitro Dave's LLC accepts NO responsibility for injuries resulting in the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES