



This Bottle Bracket Will come with enough epoxy to firmly secure the plate to the rear hatch of your Corvette. There are multiple configurations for bottle brackets which will be illustrated below.

1. Remove the carpet/liner from the rear hatch.
2. Using the supplied diagrams find the bolt pattern for your bottle brackets and install the supplied studs.
3. Once you have the studs installed in the desired bolt pattern you can epoxy down the plate in the center of the rear hatch.
4. Allow at least 30 minutes to an hour to dry before replacing the carpet or installing the bottles.
5. Replace the carpet/liner in the rear hatch, you will need to make an 'X' where the studs hit the carpet to allow the studs to protrude and mount the bracket.


*BOLT PATTERN FOR TWO X-SERIES ADJUSTABLE BRACKETS*

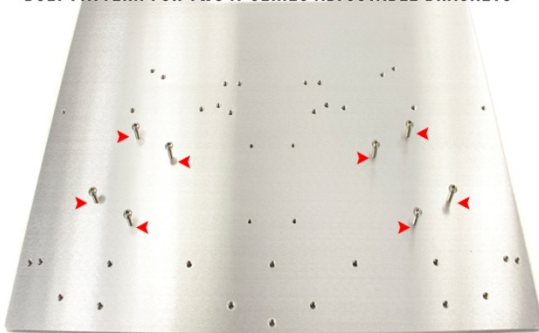


*BOLT PATTERN FOR SINGLE 860 HEATED BRACKET*

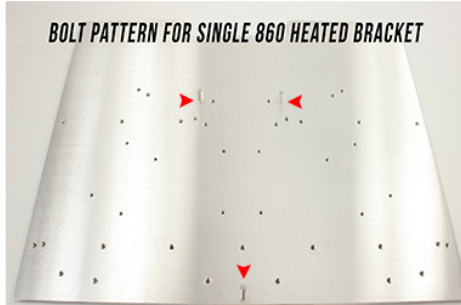


*BOLT PATTERN FOR TWO 860 HEATED BRACKETS*

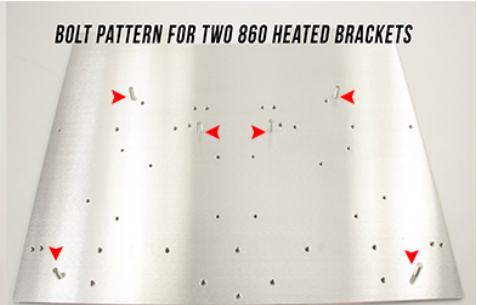

*BOLT PATTERN FOR STANDARD STAINLESS BRACKET (INSULATED OR REGULAR)*

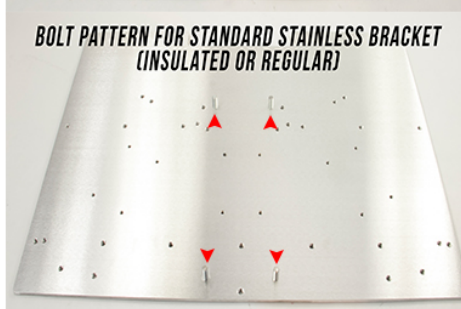


*BOLT PATTERN FOR TWO STANDARD STAINLESS BRACKET (INSULATED OR REGULAR)*

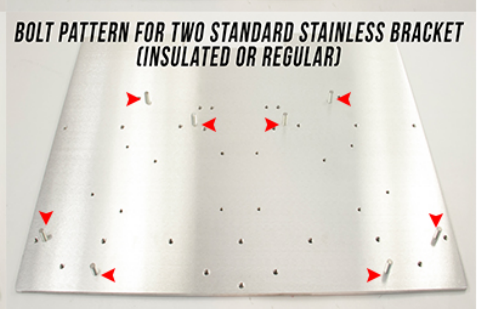


*BOLT PATTERN FOR SINGLE X-SERIES ADJUSTABLE BRACKET*




*BOLT PATTERN FOR DUAL BILLET BOTTLE BRACKET (HEATED OR NOT HEATED)*

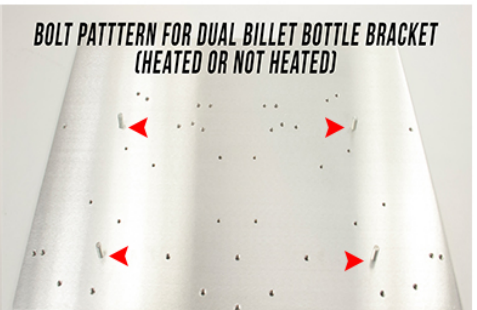

*BOLT PATTERN FOR BILLET BOTTLE BRACKET (HEATED OR NOT HEATED)*

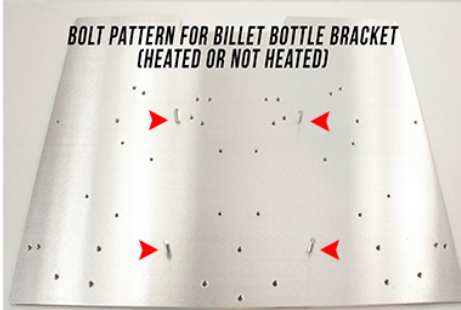

*BOLT PATTERN FOR TWO SINGLE BILLET BRACKETS (HEATED OR NOT HEATED)*

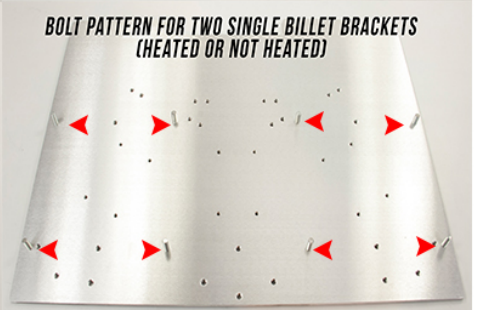

If you have any questions call a Nitrous Outlet tech specialist @ 866.648.7637