


PARTS LIST:

1	Driver/Left Sidebar	4	1/2" x 1-1/2"OD x 1/8" Flat Washers
1	Passenger/Right Sidebar	4	1/2" Lock Washers
1	Driver/Left Front Mounting Bracket	10	14mm x 45mm Hex Bolts
1	Passenger/Right Front Mounting Bracket	2	14mm x 30mm Hex Bolts
1	Driver/Left Rear Mounting Bracket	24	14mm x 44mm OD x 3mm Flat Washers
1	Passenger/Right Rear Mounting Bracket	12	14mm Lock Washers
4	1/2" x 2" Hex Bolts	12	14mm Hex Nuts

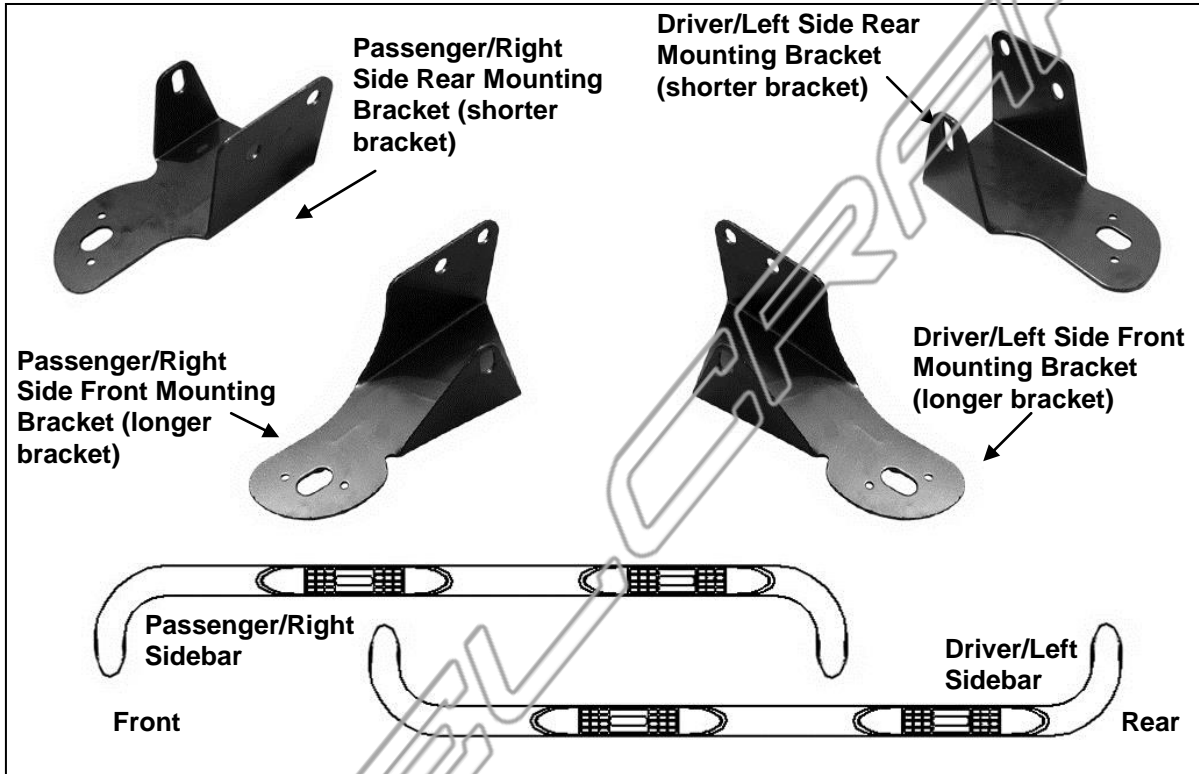

PROCEDURE:

1. **REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.**
2. Remove the factory hex bolts securing the plastic rocker panel cover on the driver side to the vehicle. Place the cover on a clean surface.
3. Position the driver side front and rear brackets up to the underside of the body mount-frame extensions. Insert the included hex bolts, flat washers and lock washers as illustrated on Page 2. Do not tighten hardware at this time. **IMPORTANT:** (2) shorter 14mm x 30mm Hex Bolts have been provided for use on the forward mounting bolts for the driver side and passenger side Front Mounting Brackets only.
4. Select the driver Sidebar and carefully place it in position on top of the Brackets. Bolt the Sidebar to the Brackets with the included 1/2" x 2" Hex Bolts, 1/2" Lock Washers and 1/2" Flat Washers.
5. Align Sidebar properly and tighten all hardware.
6. Repeat Steps 2 – 5 for passenger Sidebar installation.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**SIDEBAR
98-05 MERCEDES BENZ ML CLASS**

To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For stainless steel: Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Sidebar.

For gloss black finishes: Mild soap may be used to clean Sidebar.

