CURT™
The **FIRST** Name in Towing Products™

BASKET STYLE CARGO CARRIER

WARNINGS

- Do not exceed maximum weight capacity of 500 lbs. when using 2" receiver tube
- Distribute weight evenly on platform
- This carrier is not intended for transporting people
- Do not carry loads wider or deeper than carrier
- Do not carry flammable items on carrier
- Do not allow exhaust fumes to blow directly on items. This is a fire hazard
- CURT Manufacturing, LLC is not responsible for any damage if warnings are not heeded

PARTS LIST

Item#	Qty	Description
1	18	M6 locking nut
2	18	M6 flat washer
3	6	V support bracket
4	2	Carrier platform
5	4	M10 locking nut
6	4	M10 spring washer
7	4	M10*1.5 flat washer
8	8	M8*35 hexagonal bolt
9	1	Receiver bar
10	4	M10*60 hexagonal bolt
11	18	M6*35 hexagonal bolt

Item#	Qty	Description
12	2	Upper U tube
13	8	M8 locking nut
14	8	M8 flat washer
15	2	Connection profile
16	1	v 4.5 split pin
17	1	1/2" - 13 hex bolt
18	1	1/2" flat washer
19	1	1/2" star washer
20	1	1/4" - 20*1/2" hex bolt
21	1	Nylon adapter

ASSEMBLY

1. Lay carrier platform down, top of tube flush with plate. Assemble V support bracket (3) on carrier platform (4) and upper U tube (12). secure with M6*35 hexagonal bolts and M6 flat washer (1 and 2).

2. Align all the holes on assembled platforms (step 1) and receiver bar (9).Secure with M10*60 (10) hexagonal bolts. Lock the receiver bar (9) with connection profile (15), then assemble upper U tube into connection profile, and secure with M8*35 hexagonal bolts, M8 flat washer (13) and M8 locking nut (14).

(Note: the connection profile with reflective tapes should be assembled outside, and the one without tapes should be located on the receiver bar side.)

3. Lock M10*60 hexagonal bolt with M10 flat washer, M10 spring washer and M10 locking nut (7, 6 and 5)

4. Put the nylon adaptor (21) onto the receiver bar (9), align all the holes and secure with 1/4"-20*1/2" hex bolt. Insert carrier shank into vehicle receiver tube. Secure with anti-sway bolt & clip (16, 17, 18, 19). Ensure all hardware is tightly fastened.

Tube must be flush with top of plate for correct assembly

REFLECTIVE TAPES
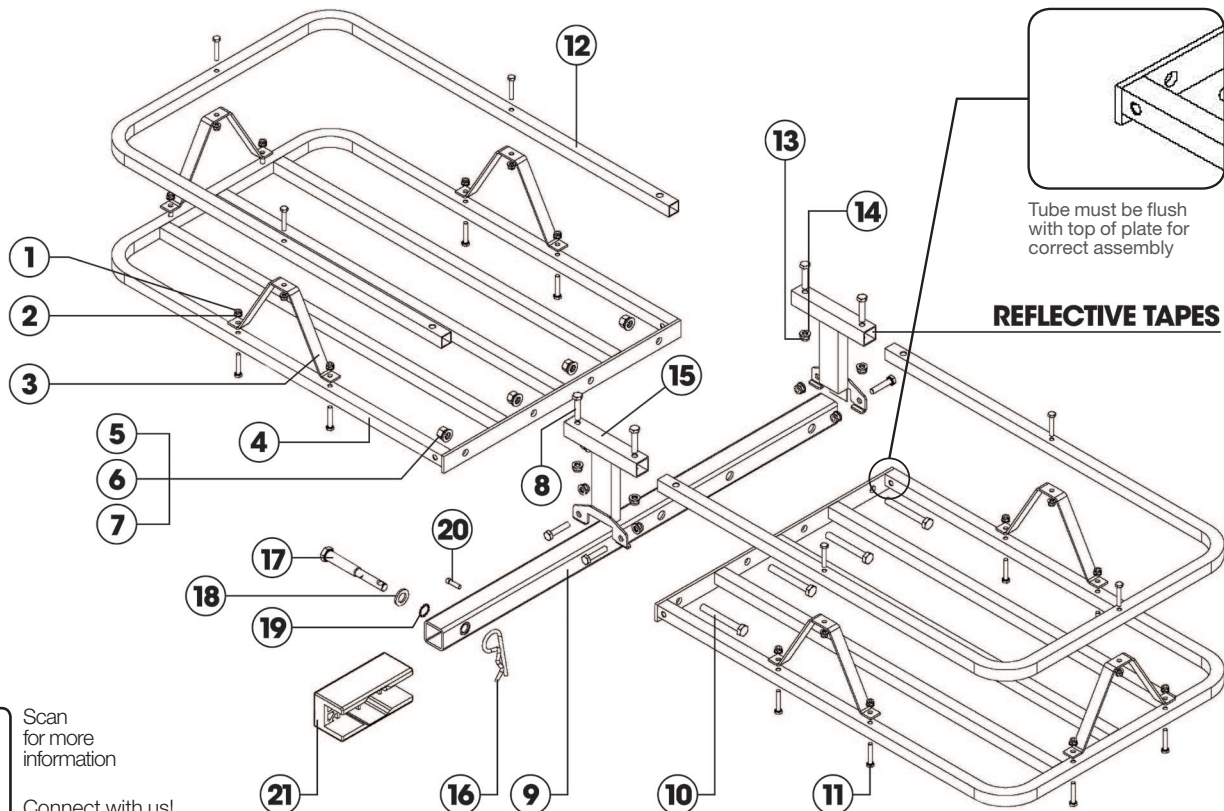
Scan for more information

Connect with us!